


OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL

RADIO TEST SET AN/PRM-34
(NSN 6625-01-094-5646)
(FIC: KMG)

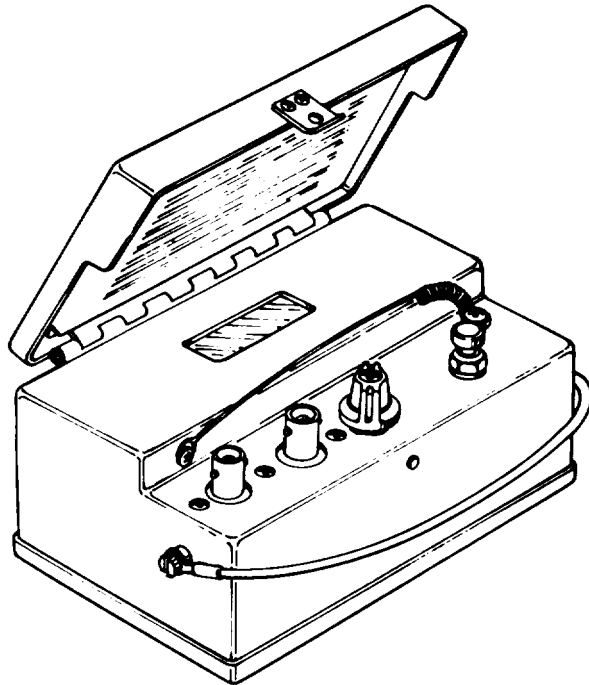

This copy is a reprint which includes current pages from Change 1.

HEADQUARTERS, DEPARTMENT OF THE ARMY

GENERAL INFORMATION
PAGE 1 1

EQUIPMENT DESCRIPTION
AND DATA
PAGE 1 5

OPERATING INSTRUCTIONS
PAGE 2 1

OPERATOR AND ORGANIZATIONAL
MAINTENANCE INSTRUCTIONS
PAGE 3 1

DIRECT SUPPORT
MAINTENANCE INSTRUCTIONS
PAGE 4 1

GENERAL SUPPORT
MAINTENANCE INSTRUCTIONS
PAGE 5 1

INDEX
PAGE INDEX 1

DO NOT ATTEMPT INTERNAL SERVICE OR ADJUSTMENT UNLESS ANOTHER PERSON, CAPABLE OF RENDERING FIRST AID AND RESUSCITATION, IS PRESENT.



5

SAFETY STEPS TO FOLLOW IF SOMEONE IS THE VICTIM OF ELECTRICAL SHOCK

1

DO NOT TRY TO PULL OR GRAB THE INDIVIDUAL

2

IF POSSIBLE , TURN OFF THE ELECTRICAL POWER

3

IF YOU CANNOT TURN OFF THE ELECTRICAL POWER, PULL, PUSH, OR LIFT THE PERSON TO SAFETY USING A WOODEN POLE OR A ROPE OR SOME OTHER INSULATING MATERIAL

4

SEND FOR HELP AS SOON AS POSSIBLE

5

AFTER THE INJURED PERSON IS FREE OF CONTACT WITH THE SOURCE OF ELECTRICAL SHOCK, MOVE THE PERSON A SHORT DISTANCE AWAY AND IMMEDIATELY START ARTIFICIAL RESUSCITATION

DON'T TAKE CHANCES — GROUND THE EQUIPMENT

Change }
No, 4 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC., 31 March 1995

**Operator's, Organizational, Direct Support and
General Support Maintenance Manual
FOR
RADIO TEST SET,
AN/PRM-34
(NSN 6625-01-094-5646) (EIC:KMG)**

<p>WARNING - This document contains technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C. Sec. 2751 et seq.) or Executive Order 12470. Violators of these export laws are subject to severe criminal penalties.</p> <p>DISTRIBUTION STATEMENT - Distribution authorized to Department of Defense and DoD contractors only to protect critical technical data on systems or hardware. This determination was made 27 Aug 88. Other requests shall be referred to Commander, U.S. Army TMDE Activity, ATTN: AMCPM-TMDE-T, Redstone Arsenal, AL 35898-5400.</p> <p>DESTRUCTION NOTICE - Destroy by any method that will prevent disclosure of contents or reconstruction of the document.</p>

TM 11-6625-3015-14, 14 October 1983, is changed as follows:

1. This change incorporates all of oversized change No, 3
2. Pen and ink change. To front cover, following NSN, add (EIC: KMG).
3. Remove old pages and insert new pages as indicated below. New or changed material is indicated by a vertical bar in the margin of the page.

Remove Pages

A and B
i and ii
1-1 thru 1-4
1-4. 1/(1-4.2 blank)
2-5 and 2-6
2-6. 1/(2-6.2 blank)
2-7 and 2-8
None
3-1 thru 3-4
3-4.1/(3-4.2 blank)
5-15 and 5-16
5-16, 1/(5 -16.2 blank)
5-21 and 5-22
5-22.1/(5-22.2 blank)
5-23 and 5-24
5-27 and 5-28
5-28. 1/(5 -28.2 blank)

Insert Pages

A and B
i and ii
1-1 thru 1-4
1-4.1 /(1-4.2 blank)
2-5 and 2-6
2-6. 1/(2-6.2 blank)
2-7 and 2-8.
2-17/(2-18 blank)
3-1 thru 3-4
3-4.1 thru 3-4.3/(3-4.4 blank)
5-15 and 5-16
5-16.1 /(5-16.2 blank)
5-21 and 5-22
5-22.1 /(5-22.2 blank)
5-23 and 5-24
5-27 and 5-28
5-28.1 /(5-28.2 blank)

PIN: 054270-004

Removepages

5-43 and 5-44
5-44.1 /(5-44.2 blank)
A-1 and A-2
C-3/(C-4 blank)
E-1 and E-2

Insertpages


5-43 and 5-44
5-44.1 /(5-44.2 blank)
A-1 and A-2
C-3/(C-4 blank)
E-1 and E-2

4. File this change sheet in the front of the publication for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN
General, United States Army
Chief of Staff

Official:


JOEL B. HUDSON

Acting Administrative Assistant to the
Secretary of the Army
00012

DISTRIBUTION:

To be distributed in accordance with DA Form 12-36, Block 2977,
requirements for TM 11-6625-3015-14.

CHANGE
No. 3

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 1 June 1988

**Operator's, Organizational
Direct Support and General
Support Maintenance Manual**

**RADIO TEST SET,
AN/PRM-34
(NSN6625-01-094-5646)**

TM 11-6625-301 5-14, 14 October 1983, is changed as follows:

1. Remove old pages and insert new pages as indicated below. New or changed material is indicated by a vertical bar in the margin of the page, Added or revised illustrations are indicated by a vertical bar adjacent to the identification number.

<i>Remove pages</i>	<i>Insert pages</i>
A/(B blank)	A and B
i and ii.	i and ii
1-1 and 1-2	1-1 and 1-2
2-5 and 26	2-5, 2-6 and 2-6. 1/(2-6.2 blank)
3-3 and 3-4.	3-3, 3-4 and 3-4.1/(3-4.2 blank)
5-15 and 5-16	5-15, 5-16 and 5-16.1/(5-16.2 blank)
5-21 and 5-22	5-21, 5-22 and 5-22.1/(5-22.2 blank)
5-27 and 5-28	5-27, 5-28 and 5-28.1/(5-28.2 blank)
5-43 and 5-44	5-43, 5-44 and 5-44.1/(5-44.2 blank)
A-1 through A-3/(A-4 blank)	A-1 and A-2

2. File this change sheet in the front of the publication for reference purposes.

Distribution authorized to the Department of Defense and DOD contractors only for official use or for administration or operational purposes. This determination was made on 29 February 1988. Other requests for this document will be referred to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-P, Fort Monmouth, NJ 07703-5000.

DESTRUCTION NOTICE-Destroy by any method that will prevent disclosure of contents or reconstruction of this document.

Change }
No. 2 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 1 January 1988

**OPERATORS, ORGANIZATIONAL DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
RADIO TEST SET AN/PRM-34
(NSN 6625-01-094-5646)**

TM 11-6625-3015-14, 14 October 1983, is changed as follows:

1. Remove old pages and insert new pages as indicated below. New or changed material is indicated by a vertical bar in the margin of the page. Added or revised illustrations are indicated by a vertical bar adjacent to the identification number.

<i>Remove pages</i>	<i>Insert pages</i>
A/(B blank)	A and B
i and ii	i and ii
2-5 and 2-6	2-5 and 2-6
2-15 and 2-16	2-15 and 2-16
3-1 through 3-4	3-1 through 3-4
5-15 and 5-16	5-15 and 5-16
5-21 and 5-22	5-21 and 5-22
5-27 and 5-28	5-27 and 5-28
5-31 and 5-32	5-31 and 5-32
B-7/(B-8 blank)	B-7/(B-8 blank)
None	D-1 and D-2
Index 1 and Index 2	Index 1 and Index 2

2. File this change sheet in front of the publication for reference purposes.

Distribution authorized to the Department of Defense and DOD contactors only for official use or for administration or operational purposes. This determination was made on 1 October 1987. Other requests for this document will be referred to Commander, US ARMY Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-P, Fort Monmouth, NJ 07703-5000.

DESTRUCTION NOTICE-Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

By Order of the Secretary of the Army:

Official:

CARL E. VUONO
General, *United States Army*
Chief of Staff

R.L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-36 literature requirements for AN/PRM-34.

CHANGE

No. 1

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 25 January 1985

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
RADIO TEST SET AN/PRM-34
(NSN 6625-01-094-5646)**

TM 11-6625-3015-14, 14 October 1983, is changed as follows.

1. Remove old pages and insert new pages as indicated below. New or changed material is indicated by a vertical bar in the margin of the page. Added or revised illustrations are indicated by a vertical bar adjacent to the identification number.

Remove pages

Insert pages

i through iv	i through iv
1-1 through 1-4	1-1 through 1-4
None	1-4.1/(1-4.2 blank)
1-7 and 1-8	1-7 and 1-8
2-9 and 2-10	2-9 and 2-10
2-13 and 2-14	2-13 and 2-14
3-1 through 3-4.	3-1 through 3-4
5-1 and 5-2.	5-1 and 5-2
5-13 and 5-14	5-13 and 5-14
5-17 and 5-18,	5-17 and 5-18
5-25 and 5-26	5-25 and 5-26
5-29 through 5-54	5-29 through 5-46
B-5 through B-8	B-5 through B-7/(B-8 blank)
F-1 and F-2	F-1 and F-2
Index- 1 through Index-6	Index-1 through Index-6

2. File this sheet in the front of the manual for reference purposes.

By Order of the Secretary of the Army:

JOHN A. WICKHAM JR.
General, United States Army
Chief of Staff

Official:

DONALD J. DELANDRO
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-36 literature requirements for AN/ PRM-34.

WARNINGS

A lithium-sulfur dioxide (LiSO₂) battery used to power the AN/PRM-34 contains pressurized sulfur dioxide (SO₂) gas. The gas is toxic, and the battery must not be abused in any way that may cause the battery to rupture.

DO NOT heat, short circuit, crush, puncture, mutilate, open, or disassemble batteries.

DO NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the wrap, a swollen plastic wrap, etc.

DO NOT USE any battery which does not easily fit into the battery compartment.

DO NOT test LiSO₂ battery(ies) for capacity, unless using an approved testing device.

DO NOT over-discharge LiSO₂ batteries.

DO NOT recharge LiSO₂ batteries.

If the battery or battery compartment shows signs of overheating or becomes hot to the touch, if you hear a hissing sound (i.e., battery venting), or smell irritating SO₂ gas, **IMMEDIATELY Turn Off** the equipment, and/or **LEAVE** the area until any smell or signs of leaking gas have been cleared from the area.

DO NOT use water to extinguish LiSO₂ battery fires if a **Shock Hazard exists** due to **high voltage** electrical equipment in the immediate vicinity (i.e., greater than 30 volts, alternating current (AC) or direct current (DC)).

DO NOT use Halon type fire extinguisher on a LiSO₂ battery fire.

In the **event of a fire** near a LiSO₂ battery(ies), **rapid cooling** of the battery(ies) is **important**. Control of the equipment fire, and cooling, may prevent the battery from venting toxic SO₂ gas and exposing lithium metal.

DO NOT store lithium batteries with, or in the same stacks as, other hazardous materials.

DO NOT smoke. Keep LiS02 batteries away from open flame of heat.

DO NOT pack batteries until they are cool to the touch.

If a battery is damaged, malfunction, or shows signs of overheating; e.g., too hot to hold during discharge, a melted plastic case, or a vented cell, you **CAN NOT** ensure that it will properly discharge. **DO NOT** attempt to discharge these batteries, and they **MUST** be disposed of as reactive hazardous waste (i.e., D003).

DO NOT pack batteries in a box, barrel, or drum, or tightly stack on a shelf, during initial discharge with a built-in CDD.

DO NOT attempt to operate test set if battery voltage under load is below four volts or if BIT. indicates test set is defective.

In the event that any battery abnormally (e.g., arcing, overheating) occurs during operation, turn unit MODE switch to OFF CHK and discontinue use.

By Order of the Secretary of the Army:

Official:

CARL E. VUONO
General, United States Army
Chief of Staff

R.L. DILWORTH
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-36 literature requirements for AN/PRN-34.

TECHNICAL MANUAL

No. 11-6625-3015-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D. C., 14 October 1983

**Operator's, Organizational Direct Support and General
Support Maintenance Manual
FOR
RADIO TEST SET,
AN/PRM-34
(NSN 6625-01-094-5646) (EIC: KMG)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, U.S. Army Missile Command. ATTN: AMSMI-MMC-LE-FP, Redstone Arsenal, AL 35898-5238. A reply will be furnished to you.

WARNING - This document contains technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C. Sec. 2751 *et seq.*) or Executive Order 12470. Violators of these export laws are subject to severe criminal penalties.

DISTRIBUTION STATEMENT - Distribution authorized to Department of Defense and DoD contractors only to protect critical technical data on systems or hardware. This determination was made 27 Aug 88. Other requests shall be referred to Commander, U.S. Army TMDE Activity, ATTN: AMCPM-TMDE-T, Redstone Arsenal, AL 35898-5400.

DESTRUCTION NOTICE - Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

TABLE OF CONTENTS

			Paragraph	Page
CHAPTER 1	INTRODUCTION			
Section	I	General Information	1-1	1-1
	II	Equipment Destination and Data	1-10	1-5
	III	Principles of Operation	1-13	1-8
CHAPTER 2	OPERATING INSTRUCTIONS			
Section	I	Description and Use of Operator Controls and Indicators	2-1	2-1
	II	Operation Under Usual Conditions	2-2	2-3
	III	Operation Under Unusual Conditions	2-7	2-15

	Paragraph	Page
CHAPTER 3 <u>OPERATOR AND ORGANIZATIONAL MAINTENANCE INSTRUCTIONS</u>		
Section	I Repair Parts, Special Tools, TMDE, and Support Equipment	3-1 3-1
	II Preventive Maintenance Checks and Services (PMCS)	3-4 3-1
	111 Troubleshooting	3-5 3-3
	IV Maintenance Procedures	3-6 3-3
 CHAPTER 4 <u>DIRECT SUPPORT MAINTENANCE INSTRUCTIONS</u>		
	4-1 4-1
 CHAPTER 5 <u>GENERAL SUPPORT MAINTENANCE INSTRUCTION</u>		
Section	I General	5-1 5-1
	II Repair Parts, Special Tools, TMDE, and Support Equipment	5-3 5-1
	III Theory of Operation	5-6 5-1
	IV Troubleshooting	5-7 5-2
	V Maintenance Procedures	5-12 5-13
 APPENDIX		
A	REFERENCES	A-1
B	MAINTENANCE ALLOCATION CHART	B-1
C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS	C-1
D	ADDITIONAL AUTHORIZATION LIST (Not Applicable)	
E	EXPENDABLE SUPPLIES AND MATERIALS LIST	E-1
F	ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1
 INDEX		 Index 1

RADIO TEST SET AN/PRM-34

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1	Radio Test Set AN/PRM-34	1 -2
1-2	Location of Major Components	1-6
1-3	Test Set Block Diagram...	1-9
2-1	Controls, Indicators, and Connectors.	2-4
2-2	Unpacking AN/PRM-34	2-5
2-3	Built-In-Test Procedures	2-8
2-4	Test Set and AN/VRC-12 Interconnection Diagram.	2-9
2-5	Test Set and AN/PRC-77 Interconnection Diagram.	2-9
2-6	Test Set and AN/PRC-68 Interconnection Diagram.	2-9
2-7	Test Set and AN/PRC-68 Field Strength Test Interconnection Diagram..	2-13
2-8	Instruction Plate Sheet 1 Instructions	2-15
2-9	Instruction Plate Sheet 2 Instructions	2-16
5-1	Interconnection Schematic Diagram	5-3
5-2	Troubleshooting Logic Tree (Sheet 1 of 6)	5-7
5-2	Troubleshooting Logic Tree (Sheet 2 of 6)	5-8
5-2	Troubleshooting Logic Tree (Sheet 3 of 6)	5-9
5-2	Troubleshooting Logic Tree (Sheet 4 of 6)	5-10
5-2	Troubleshooting Logic Tree (Sheet 5 of 6)	5-11
5-2	Troubleshooting Logic Tree (Sheet 6 of 6)	5-12
5-3	Radio Test Set TS-3951/PRM-34, Exploded View	5-15
5-4	Removing 2A2 Module	5-18
5-5	Connections to 2A3 Module	5-19
5-6	Test Set (S.N. 635 and Up) Interior View from Bottom	5-22
5-7	Built-in Test and Undervoltage Test Setup	5-33
5-8	Forward Power, Frequency and Reverse Power Test Setups	5-35
5-9	RF Spectrum Test Setup	5-38
5-10	Field Strength Test Setup	5-40
5-11	Potentiometer Locations, Power Detector Module (2A3)	5-42
5-12	Oscillator Components on 2A2 Module	5-44
F-1	Field Strength Test Cable	F-2

LIST OF TABLES

Table	Title	Page
1-1	Equipment to be Calibrated	1-3
1-2	Nomenclature Cross-reference List	1-4
2-1	Description and Use of Controls	2-1
3-1	Preventive Maintenance Checks and Services	3-2
5-1	Troubleshooting Symptom Index	5-4

CHAPTER 1

INTRODUCTION

Section I. GENERAL INFORMATION

1-1. MULTIPLE CONFIGURATION COVERAGE. This technical manual covers two basic configurations of Radio Test Set AN/PRM-34. The first includes serial numbers 1 through 634, and the second includes serial numbers 635 and up. The first configuration is further divided by a minor change involving units with serial numbers 100 through 634. This minor change improves the method of performing spectrum level alignment.

a. Serial Numbers 1 through 634. The test set is slightly smaller and has sharp corners. The field strength circuit is neither repairable nor replaceable. There is no antenna adapter provided, and the transit case is larger.

b. Serial Numbers 635 and up. The test set has a slightly larger, yet lighter chassis. The field strength circuit consists of a removable circuit card assembly, having the circuit designation of 2A4. The transit case is smaller, and an adapter is included to connect the unit to an AN/PRC-68 antenna connector.

1-2. SCOPE. This technical manual covers the operation and maintenance of the Radio Test Set AN/PRM-34 (fig. 1-1). The AN/PRM-34 is recommended for use at the organizational level of maintenance for field testing of FM receiver-transmitters that operate in the 30 to 75 MHz (S.N. 635 and up, 30 to 80 MHz) frequency range. It is capable of testing receiver sensitivity and squelch circuits, transmitter forward and reverse power, frequency, and relative radiated field strength. The table of contents gives the order and contents of this manual. The index will help you to find specific items. Chapter 2 covers the operating instructions, Chapter 3 covers organizational maintenance, Chapter 4 covers direct support maintenance, and Chapter 5 covers general support maintenance.

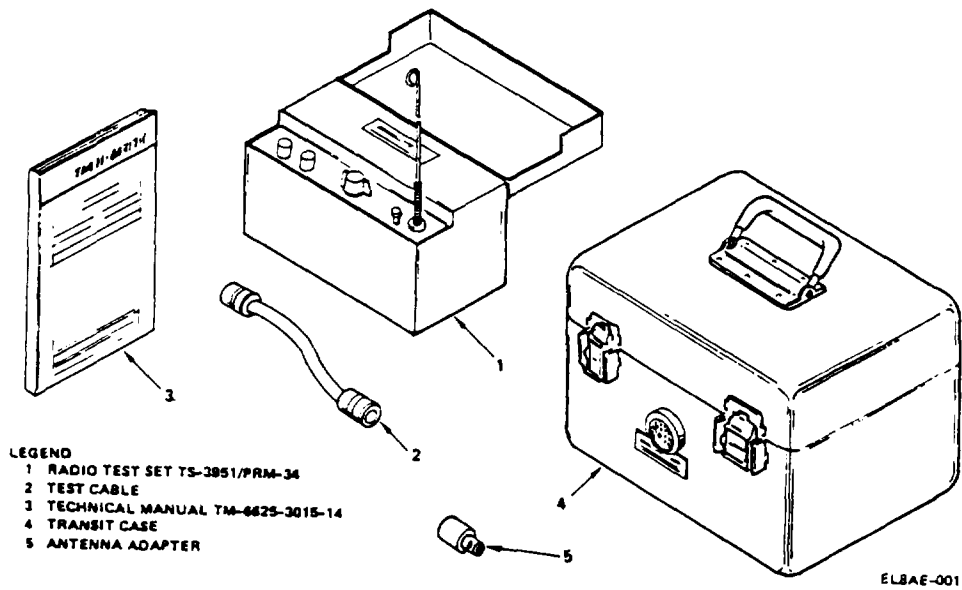


Figure 1-1. Radio Test Set AN/PRM-34

1-3. MAINTENANCE FORMS, RECORDS, AND REPORTS. Department of the Army forms and procedure used for equipment maintenance will be those prescribed by DA Pam 738-750, as contained in Maintenance Management Update.

1-4. CALIBRATION. Table 1-1 contains a list of equipment that must be calibrated before performing the maintenance procedures prescribed in this manual. Equipment should be calibrated using procedures prescribed in the designated manual.

1-5. HAND RECEIPT (-HR) MANUALS. This manual has a companion document with a TM number followed by "-HR" (which stands for Hand Receipt). The TM 11-6625-3015-14-HR consists of preprinted hand receipts (DA Form 2062) that list end item related equipment (i.e., COEI, BII, and AAL) you must account for. As an aid to property accountability, additional -H R manuals may be requisitioned from the US Army Adjutant General Publications Center, Baltimore, MD, in accordance with procedures in Chapter 12 of AR 25-30.

Table 1-1. Equipment to be Calibrated

Equipment	Manufacturer's model no.	NSN	Manual
RF Signal Generator	HP 8640B	4931-01-085-4229	
Power Meter	HP 432A	6625-00-148-8069	
Digital Multimeter	TEK DM501A	6625-01-075-8583	
Spectrum Analyzer	TEK 492		
Frequency Counter	HP 5345A	4931-01-040-0121	

1-6. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE. To prevent enemy use of this equipment, refer to TM 750-244-2 for destruction of Army materiel.

1-7. ADMINISTRATIVE STORAGE. Administrative storage of equipment issued to and used by Army activities will have preventive maintenance performed in accordance with the PMCS charts before storing. When removing the equipment from administrative storage the PMCS should be performed to assure operational readiness. Disassembly and repacking of equipment for shipment or limited storage are covered in paragraph 2-2.

1-8. OFFICIAL NOMENCLATURE, NAMES, AND DESIGNATIONS. Refer to Table 2-1 for information concerning reference designations, official nomenclature, and common names of portions of the AN/PRM-34.

TABLE 1-2. Nomenclature Cross-Reference List

Reference designation	Official nomenclature	Common name
--	Radio Test Set AN/PRM-34	AN/PRM-34
2A1	Frequency Counter Circuit Card Assembly	2A1 module
2A2	Spectrum Generator Circuit Card Assembly	2A2 module
2A3	Power Detector Circuit Card Assembly	2A3 module
2A4	Test Set Subassembly (S, N. 1 through 634)	Subassembly
2A4	Field Strength Circuit Card Assembly (S.N. 635 and Up)	2A4 module
2A5	Chassis Subassembly S.N.635 and Up)	Subassembly

1-9. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIRS). If your AN/PRM-34 needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design. Put it on an SF 368 (Quality Deficiency Report). Mail it to Commander, U.S. Army Missile Command, ATTN: AMS,MI-RD-QA-CF, Redstone Arsenal, AL 35898-5290.

1-9.1 CONSOLIDATED INDEX OF ARMY PUBLICATIONS AND BLANK FORMS.
Refer to the latest issue of DA Pam 25-30 to determine whether
there are new editions, changes or additional publications
pertaining to the equipment. ■

Section II. EQUIPMENT DESCRIPTION AND DATA

1-10. EQUIPMENT CHARACTERISTICS, CAPABILITIES, AND FEATURES. The AN/PRM-34 is a handheld, easy to use device for field testing of receiver-transmitters.

a. *Characteristics.* The AN/PRM-34 offers versatility of use.

- (1) Connects between receiver-transmitter and antenna.
- (2) Test receiver sensitivity.
- (3) Tests receiver squelch circuitry.
- (4) Measures transmitter output frequency.
- (5) Measures transmitter output power (forward and reflected).
- (6) Measures transmitter relative radiated field strength.
- (7) May be used to adjust tuning inductor (L1) of AN/PRC-68 .

b. *Capabilities.* The AN/PRM-34 is useful in performing tests on the following radio equipment:

<u>Receiver-Transmitter</u>	<u>Part of Radio Set</u>
RT-246()/VRC	AN/VRC-12, -43, -44, -45
RT-524()/VRC	AN/VRC-46, -47, -48, -49
R-442()/VRC	AN/VRC-42, -44, -47, -48
RT-841/PRC-77	AN/VRC-64, AN/GRC-160, AN/PRC-77
RT-505/PRC-25	AN/VRC-53, AN/GRC-125, AN/PRC-25
RT-1113/PRC-68	AN/PRC-68

1-11. LOCATION AND DESCRIPTION OF MAJOR COMPONENTS. The AN/PRM-34 consists of four (five, S.N. 635 and up) major components, as shown in figure 1-2.

a. *Radio Test Set TS-3951/PRM-34-the* basic testing device used to evaluate transmitters and receiver-transmitters.

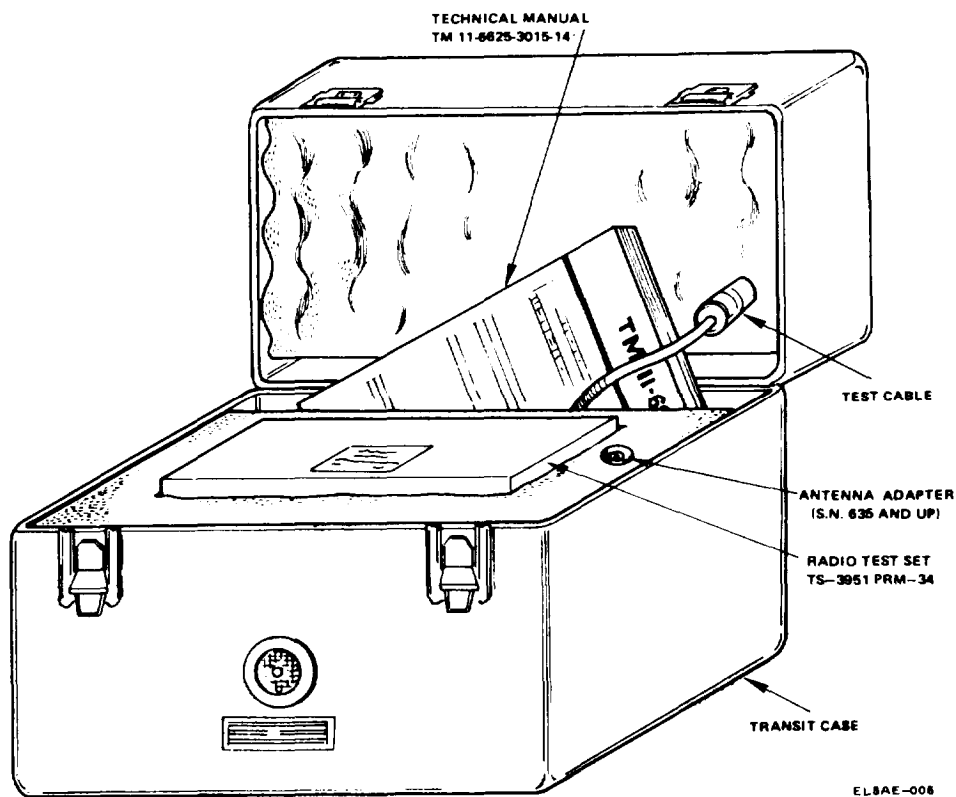


Figure 1-2. Location of Major Components

- b. *Test Cable* - coaxial 500 cable terminated with UG-88G/U BNC male plugs for interconnection of the test set and radio equipment to be tested.
- c. *Technical Manual TM11-6625-3015-14* - includes basic information on operation, theory of operation, and maintenance.
- d. *Transit Case* - affords protection against damage from shocks, moisture, etc. while not in use.
- e. *Antenna Adapter (S.N. 635 and up)* - attaches to AN/PRC-68 antenna connector for testing.

1-12. EQUIPMENT DATA.

a. <i>Transit Case.</i>	<u>S.N. 1 thru 634</u>		<u>S.N. 635 and up</u>	
(1) Height cm./in. max.	31.75	12.5	16.51	6.5
(2) Width cm. /in. max.	32.39	12.75	32.576	12.825
(3) Depth cm./in. max.	24.13	9.5	22.225	8.75
(4) Weight Kg./lb. UMX.	3.6	8.0	2.475	5.5
 b. <i>Test Set.</i>				
(1) Physical.				
(a) Height cm./in. max.	8.415	3.313	9.525	3.75
(b) Width cm./in. max.	21.59	8.5	21.59	8.5
(c) Depth cm./in. max.	11.217	4.416	13.335	5.25
(d) Weight Kg./lb. UMX.	1.825	4.375	1.669	4.0
 (2) <i>Electronic..</i>				
(a) Receive sensitivity	$3 \pm 1 \mu\text{v}$		$3 \pm 1 \mu\text{v}$	
(b) Receive squelch with audible tone	$3 \pm 1 \mu\text{v}$		$3 \pm 1 \mu\text{v}$	
(c) Transmit forward/reverse power accuracy	$\pm 20\%$ (3-40 w)		$\pm 20\%$ (1-2.0 w) $+20,-27\%$ (2.1-9.9 W) $\pm 20\%$ (10-50 w)	
(d) Transmit frequency	$\pm 2 \text{ kHz}$		$\pm 2 \text{ kHz}$	

<u>(e)</u> Temperature range	-20 to +50°C	-20 to +50°C
------------------------------	--------------	--------------

c. BA-5847/U *Lithium/Sulphur Dioxide Battery.*


- (1) Height 9.525 cm. (3.75 in.) max.
- (2) Width 6.477 cm. (2.55 in.) max.
- (3) Depth 3.81 cm. (1.5 in.) max.
- (4) Weight 280 Kg. (100 oz.) max.

Section III. PRINCIPLES OF OPERATION

1-13. FUNCTIONAL DESCRIPTION OF AN/PRM-34 TEST SET (fig. 1-3) .

a. *General.* The test set provides six tests on receiver-transmitters. Two of the tests check the receiving section of a receiver-transmitter. These tests check the receiver sensitivity (ability to receive weak signals) and the 150 Hz tone squelch circuits. Both tests are performed with the MODE switch in the SENS SQ position. The other four tests measure the forward power, reverse (reflected) power, frequency, and relative radiated field strength of the transmitting section of a receiver-transmitter. These four tests are performed with the MODE switch in the FWD PWR, RVS PWR, FREQ, and FLD STR positions, respectively. A built-in-test (BIT) is provided for evaluation of the test set.

b. *Receiver Tests.* To test the receiver, the test set outputs a spectrum of frequencies from 30 to 75 (80, S.N. 635 and up) MHz spaced 5 MHz apart. This spectrum is modulated with 150 Hz and 900 Hz tones. When the test set MODE switch is in the SENS SQ position and the test set PUSH TO TEST button is pushed, the frequency spectrum is output from the RADIO connector to the antenna connector of the receiver under test. By putting the receiver in an unsquelched mode and setting the frequency of the receiver to 30, 35, 40, 45, 50, 55, 60, 65, 70 or 75 (80, S.N. 635 and up) MHz, the -97 dBm level of the spectrum should produce noticeable quieting in the handset as the test set PUSH TO TEST switch is pushed, and the 900 Hz tone should be heard. The squelch circuits are tested by placing the receiver in a squelched mode and setting the frequency of the

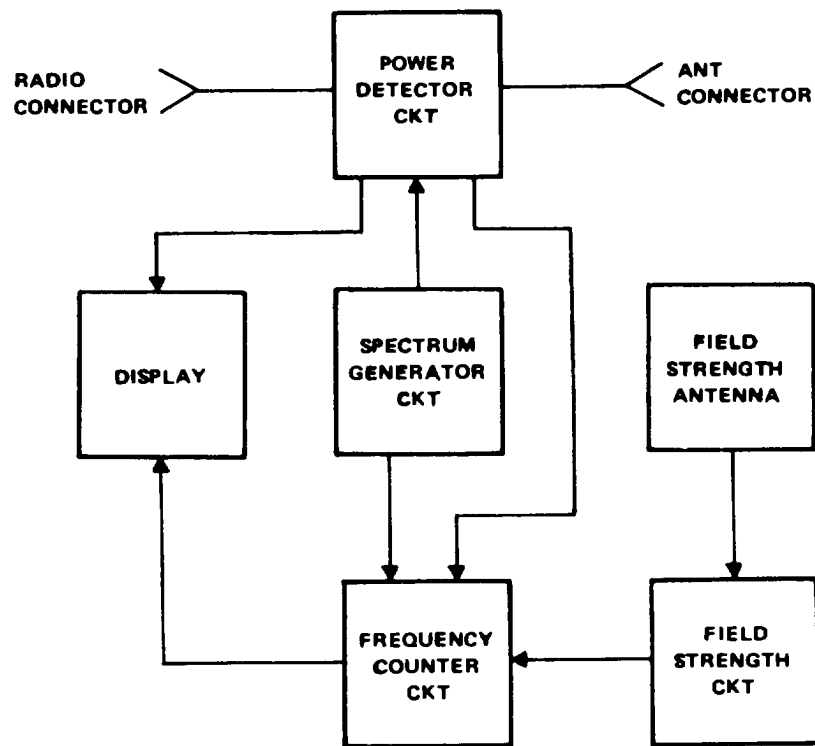

EL8AE-007

Figure 1-3. Test Set Block Diagram

receiver to 75 MHz. At that frequency the deviation due to the 150 Hz modulation in the test set output spectrum is sufficient to disable the receiver squelch circuits. The 900 Hz tone should be heard in the handset when the test set PUSH TO TEST switch is pushed. During these tests no connection is made to the ANT connector. This prevents picking up unwanted signals. The display remains off. The test set only outputs the spectrum when the test set PUSH TO TEST switch is pushed.

c. Transmitter Tests. To test a transmitter, the test set inputs an RF signal from the transmitter under test. Each of the four transmitter tests requires a different position of the MODE switch. Each test measures a different parameter of the RF transmit signal. In the FWD PWR, RVS PWR, and FREQ positions, the RF signal from the transmitter under test is input to the RADIO connector. A 50-ohm load is connected to the ANT connector to terminate the signal. In the FLD STR position, no connection is made to either connector. Field strength is measured through the FLD STR ANT (field strength antenna).

(1) *Forward power test.* In the FWD PWR mode, the transmitter output power is measured in watts. The signal picked up by the test set at the RADIO connector is coupled to a power detector. The power is displayed. Both the PTT on the handset and the test set PUSH TO TEST switch must be pushed to get a reading on the display.

(2) *Reverse power test.* In the RVS PWR mode, the reverse power (power reflected back to the transmitter from the antenna due to impedance mismatch) is measured in watts. This is coupled to the power detector and shown on the test set display. Both the PTT switch on the handset and the test set PUSH TO TEST switch must be pushed to get a reading on the display.

(3) *Frequency test.* In the FREQ mode, the frequency of transmitter output is measured in megahertz (MHZ). The signal input at the RADIO connector of the test set is coupled to a frequency counter. The frequency of the signal is displayed. Both the PTT on the handset and the test set PUSH TO TEST switch must be pushed to get a reading on the display.

(4) *Field strength test.* In the FLD STR mode, the relative field strength of the transmitted RF signal is measured. The number displayed on the test set is a number which varies from 0 to 99.9. The tuning inductor (L1) of the AN/PRC-68 is adjusted for the maximum display reading on the test set. Because of an internal timer, the test set PUSH TO TEST switch may be released, and a 45 second delay allows sufficient time to adjust L1.

CHAPTER 2

OPERATING INSTRUCTIONS

Section I. DESCRIPTION AND USE OF OPERATOR'S CONTROLS AND INDICATORS

2-1 1 DESCRIPTION OF OPERATOR'S CONTROLS AND INDICATORS. Refer to table 2-1 and figure 2-1 for information about indication, description, and use of test set controls and indicators.

Table 2-1. Description and Use of Controls

Display - is made up of five 7-segment digits and three LEDs. Frequency displayed is in megahertz (MHz) and power in watts. Field strength is a nondimensional number between 0 and 99.9. The MHZ LED will light up when frequency is displayed. The WATTS LED will light up when power is displayed. The FLD STR LED will light up when field strength is measured.

RADIO - is a BNC connector which is used to connect the test set to the RF output of the receiver-transmitter under test.

ANT- is a BNC connector which is used to connect the test set to the vehicular or 50 ohm antenna or to a 50-ohm load.

MODE - is a six-position switch which is used to select the particular test required.

<u>Position</u>	<u>Function</u>
OFF CHK	Off Check is used during the built-in-test. When the MODE switch is in the OFF CHK position and the test set PUSH TO TEST switch is pushed, "1.000" or "01.000" will appear on the display if the test set is operational.

Table 2-1. Description and Use of Controls - Continued

<u>Position</u>	<u>Function</u>
SENS SQ	Sensitivity Squelch is used to test the sensitivity and squelch circuits of a receiver or receiver-transmitter. The display does not light up when the MODE switch is in this position.
FWD PWR	Forward Power is used to test the forward power of the RF output signal from a transmitter or receiver-transmitter. The power in watts will appear on the display when the test set PUSH TO TEST switch is pushed, and the WATTS LED will light up.
RVS PWR	Reverse (reflected) Power is used to test the impedance mismatch. The reverse power will appear on the display when the test set PUSH TO TEST switch is pushed, and the WATTS LED will light up.
FREQ	Frequency is used to measure the frequency of the RF output signal from a transmitter or receiver-transmitter. The frequency in megahertz (MHz) will appear on the display when the test set PUSH TO TEST switch is pushed, and the MHZ LED will light Up.
FLD STR	Field Strength is used to measure the field strength of the RF output signal from a transmitter or receiver-transmitter. A nondimensional number will appear on the display when the test set PUSH TO TEST switch is pushed, and the FLD STR LED Will light Up. A timer circuit allows the operator to release the test set PUSH TO TEST switch and provides time to make transmitter adjustment.

PUSH TO TEST - applies DC power to the test set internal circuitry from the battery.

Table 2-1. Description and Use of Controls - Continued

FLD STR ANT	- used during field strength test to measure relative radiated field strength of the RF output signal from a transmitter or receiver-transmitter.
Test Set Handle	- serves as a handle to transport the test set, and is also used to provide a ground connection during the FLD STR test.

Section II. OPERATION UNDER USUAL CONDITIONS

2-2. ASSEMBLY AND PREPARATION FOR USE. This paragraph includes procedures for unpacking, checking, assembling, servicing, and adjusting AN/PRM-34.

a. Service Upon *Receipt*.

(1) *unpacking*. Refer to figure 2-2. The AN/PRM-34 is packaged in a corrugated carton encompassing the transit case. The TS-3951/PRM-34 test set is inside the transit case, along with this technical manual and the test cable.

- (a) Open corrugated carton and remove unit.
- (b) Remove protective moistureproof wrapping.
- (c) Depress core of relief valve (on front of transit case) momentarily.

NOTE

Each component is enclosed in a protective plastic envelope for shipping.

- (d) Open transit case and remove test set, test cable, and technical manual, removing protective envelope from each.


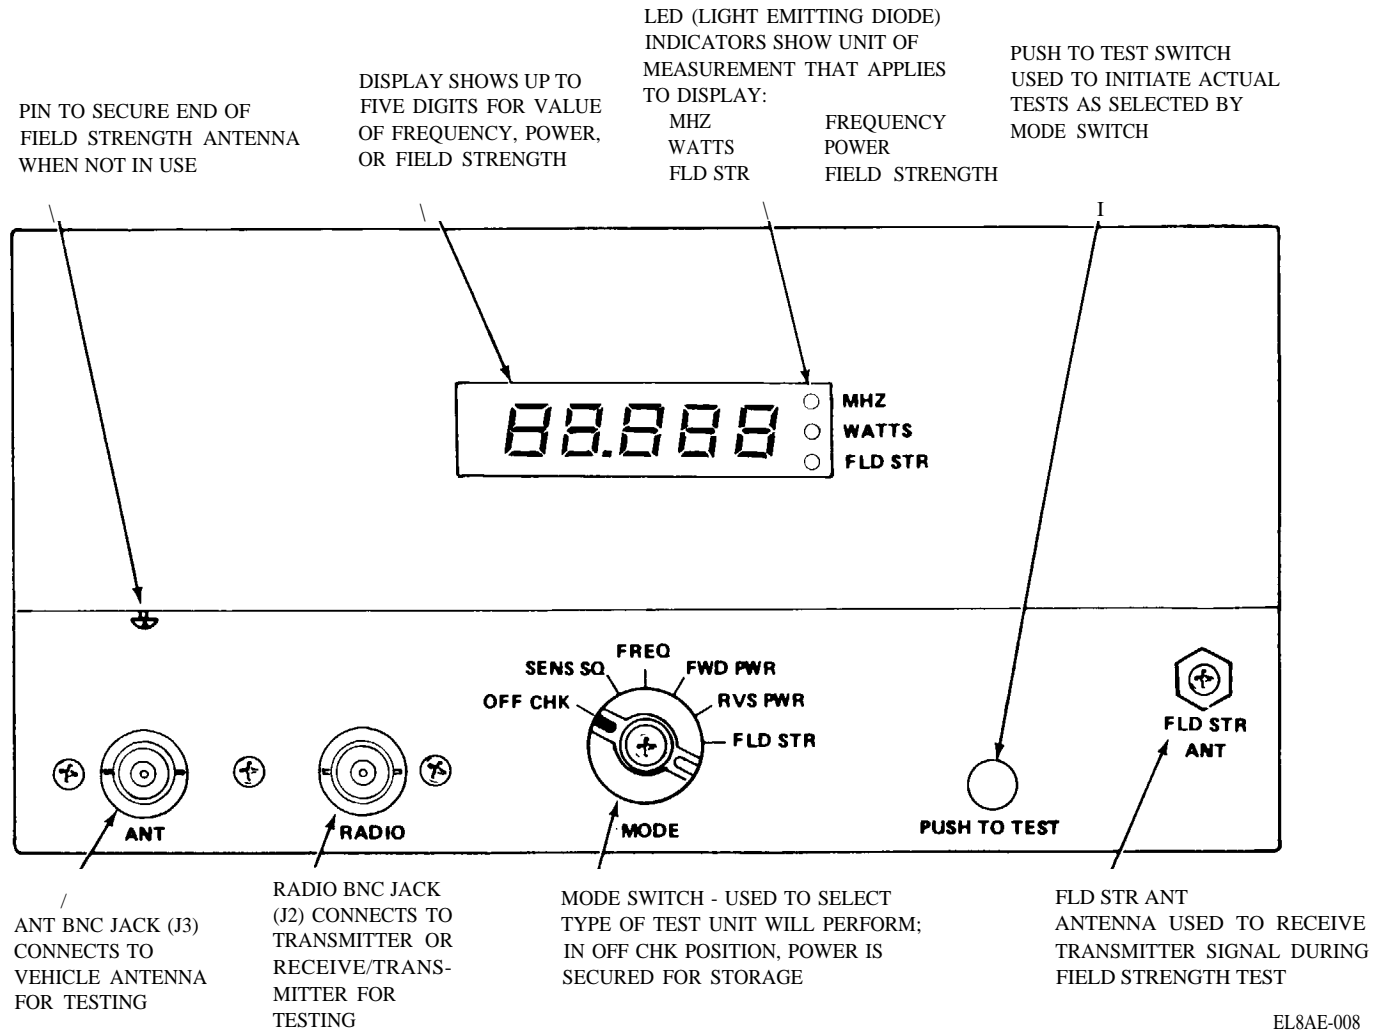


Figure 2-1. Controls, Indicators, and Connectors

EL8AE-008

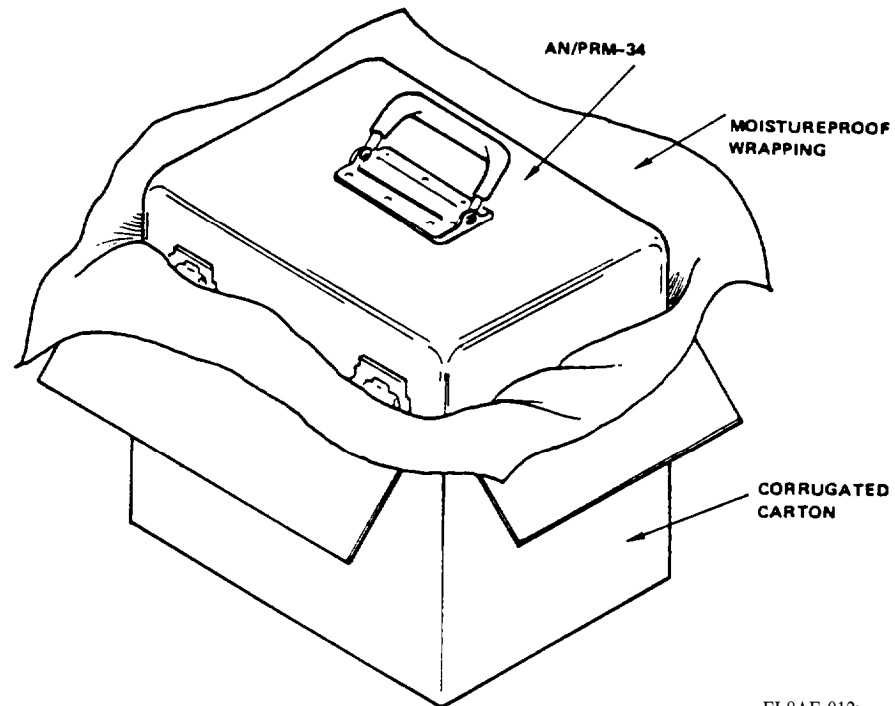

EL8AE-012

Figure 2-2. Unpacking AN/PRM-34

(2) Checking unpacked equipment.

- (a) Inspect for possible shipping damage. Report any damage on SF 364 (Report Of Discrepancy),.
- (b) Check contents with packing slip information to be sure shipment is complete. Report all discrepancies in accordance with DA Pam 738-750.
- (c) Check to be sure equipment has not been modified.

b. Assembly of Unpacked Equipment.

(1) The test set is not operable upon unpacking.

(2) The test set is shipped without battery. Installation of one lithium battery BA-5847/U (NSN 6135-01-090-5364) is required for operation.

(3) To install battery, proceed as follows:

WARNINGS

■ A lithium-sulfur dioxide (Li-SO₂) battery used with the test set contains pressurized sulfur dioxide (SO₂) gas. The gas is toxic, and the battery **MUST NOT** be abused in any way which may cause the battery to rupture. See the WARNING pages of this manual.

■ **DO NOT** heat, short circuit, crush, puncture, mutilate, or disassemble batteries.

DO NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the plastic wrap, a swollen plastic wrap, etc.

DO NOT USE any battery which does not easily fit into the battery compartment.

DO NOT test LI-SO₂ batteries for capacity.

DO NOT recharge LI-SO₂ batteries.

■ **DO NOT** attempt to operate test set if battery voltage under load is below four volts or if BIT indicates test set is defective.

■ *During* operation, if the battery or battery compartment shows signs of overheating or becomes hot to the touch, if you hear a hissing sound (i.e., battery venting), or smell irritating SO₂ gas, **IMMEDIATELY** Turn Off the test set and/or **LEAVE** the area until any smell or signs of leaking gas have been cleared from the area.

CAUTION

ONLY use batteries which have been authorized for this equipment.

NOTE

Install battery only to prepare test set for field operation. If unit has been received for maintenance, do not install battery. An external power source will be used during servicing procedures.

- (a) Place test set upside down on clean rubber pad on work surface.
- (b) Unscrew six (four, S.N. 635 and up) captive screws securing bottom cover.
- (c) Remove bottom cover.
- (d) Connect battery to battery connector (P3) of test set subassembly. (See figure 5-3.)
- (e) Place battery onto gasket (black foam pad) of battery retainer.
- (f) Install bottom cover.

(g) Tighten six (four, S.N. 635 and up) screws to secure bottom cover.

c. *Preliminary Servicing and Adjustment.* Preliminary servicing consists of performing the built-in-test (BIT) (para 2-3c).

2-3. OPERATING PROCEDURES.

CAUTION

Prior to performing test set operational tests on the RT-524/VRC, the RT-246/VRC, or the R-442/VRC, it is absolutely necessary that the AN/VRC-12 unit under test be turned on and allowed at least 5 minutes to warmup.

a. *General.* The test set is a small, simple-to-operate unit for field functional testing of AN/VRC-12 series, AN/PRC-77, and AN/PRC-68 family receiver-transmitters. The test set connects between the transmitter RF output BNC connector and the coaxial feedline to the antenna or a 50-ohm load. It can check receiver sensitivity and tone squelch circuits, transmitter forward and reverse power, transmitter RF output frequency, and relative radiated field strength.

b. *Test Set Turn On Procedure.*


NOTE

No warmup time is required for the test set.

(1) For the BIT, make no connections to RADIO or ANT connectors, and leave MODE switch in OFF CHK Position.

(2) For test of communication equipment, make connections as indicated and turn MODE switch to position required.

c. *Built in Test.* Perform BIT by following instructions provided in figure 2-3.

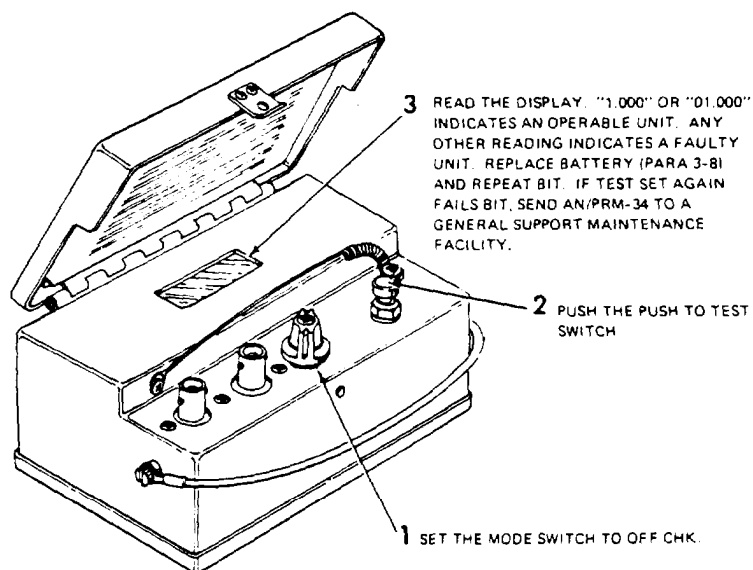

NOTE: DO NOT CONNECT ANY EXTERNAL EQUIPMENT TO THE ANT OR RADIO CONNECTIONS ON THE TEST SET WHEN RUNNING THE BUILT-IN-TEST.

EL8AE-009

Figure 2-3. Built-in-Test Procedures

NOTE

As applicable, the following test data results, can be documented using a reproduced copy of Table 2-1 test Data Documentation Summary Sheet.

d. Receiver Sensitivity Squelch Test.


CAUTION

If AN/VRC-12 is to be tested, allow radio to warmup at least 5 minutes before starting test.

NOTE


To prevent reception of unwanted signals, do not connect antenna to test set.

- (1) Make connections as indicated in figures 2-4, 2-5, or 2-6.
- (2) Set test set MODE switch to SENS SQ.
- (3) Set radio controls for unsquelched operation.

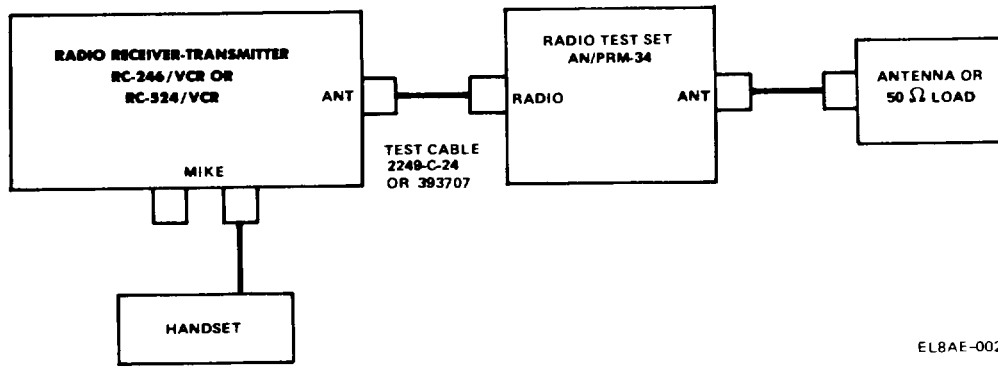


EL8AE-002

Figure 2-4. Test Set and AN/VRC-12 Interconnection Diagram

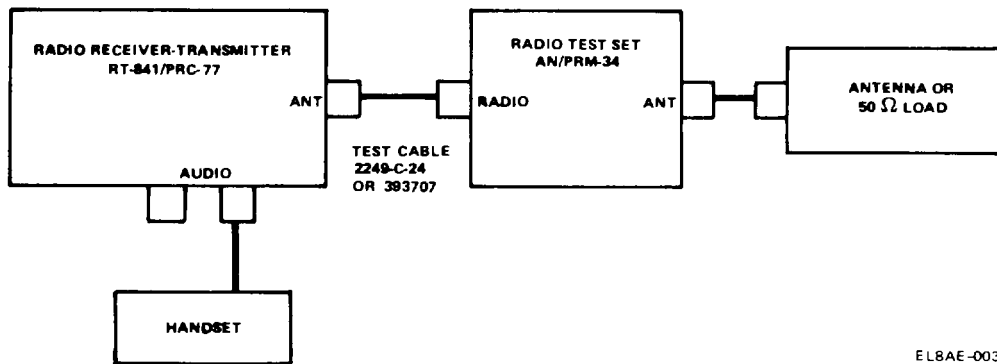

EL8AE-003

Figure 2-5. Test Set and AN/PRC-77 Interconnection Diagram

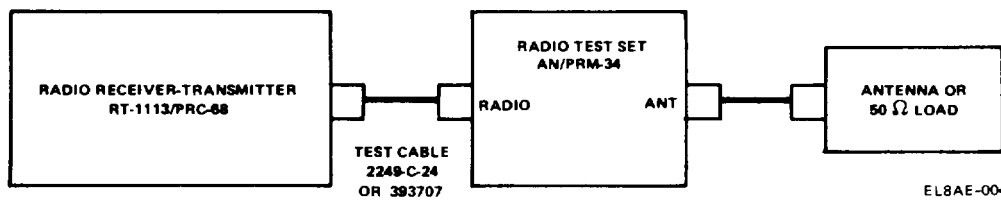

EL8AE-004

Figure 2-6. Test Set and AN/PRC-68 Interconnection Diagram

- (4) Connect handset to radio.
- (5) Set radio to each of the following frequencies; at each, push test set PUSH TO TEST switch and listen for a 900 Hz tone with lower background noise level:

Frequency (MHz)

30
40
60
75

- (6) Set radio controls for squelched operation. Leave frequency at 75 MHz.
- (7) Push test set PUSH TO TEST switch and listen for 900 Hz tone.

e. *Forward and Reverse Power Test.*

(1) *Forward power test.*

- (a) Make connections as indicated in figure 2-4, 2-5, or 2-6.
- (b) connect handset to radio.
- (c) Set MODE switch to FWD PWR.
- (d) Set radio controls for low power operation.

CAUTION

Before keying transmitter, be sure AN/PRM-34 connections to radio and antenna (or 50 Ω load) are secure. Absence of antenna or 50 Ω load (or open connections) may cause damage to radio.

- (e) Key transmitter by operating handset PTT switch. Push and hold test set PUSH TO TEST switch. Record test set display of output power in watts.
- (f) Release PTT and test set PUSH TO TEST switches.
- (g) Set radio controls for high *power* operation.
- (h) Repeat steps (e) and (f).

(2) *Reverse power test.*

CAUTION

Before keying transmitter, be sure AN/PRM-34 connections to radio and antenna (or 50Ω load) are secure. Absence of antenna or 50Ω load (or open connections) may cause damage to radio.

- (a) Set MODE switch to RVS PWR.
- (b) Key transmitter by operating handset PTT switch. Push and hold test set PUSH TO TEST switch. Record test set display of reverse power in watts.
- (c) Release PTT and test set PUSH TO TEST switches.
- (d) Set radio controls for low power operation.
- (e) Repeat steps (c) and (d).

f. *Frequency Test.*

- (1) Make connections as indicated in figure 2-4, 2-5, or 2-6.
- (2) Connect handset to radio.
- (3) Set MODE switch to FREQ.
- (4) Set radio controls for low power operation.

CAUTION

Before keying transmitter, be sure test set connections to radio and antenna (or 50Ω load) are secure. Absence of antenna or load (or open connections) may cause damage to radio.

NOTE

Forward and reverse power test should be completed before performing frequency test. Low forward power or high reverse power of radio could result in inaccurate frequency display.

- (5) Key transmitter by operating handset PTT switch. Push test set PUSH TO TEST switch. Compare test set display of output frequency with data in manual applicable to radio under test.
- (6) Release PTT and test set PUSH TO TEST switches.
- (7) Set radio controls for high power operation.
- (8) Repeat steps (4) and (5).

g. *Field Strength Test.*

NOTE

Although the test set may be used to check field strength of AN/PRC-77 or AN/VRC-12 radios, the field strength test is intended only to aid in tuning of L1 of AN/PRC-68. Following procedures apply to testing AN/PRC-68 and may not apply to other radios.

- (1) Make connections as indicated in figure 2-7.
- (2) Release tip of field strength antenna (FLD STR ANT) from screw near ANT connector. Antenna should stand vertical.

CAUTION

Be sure antenna is properly installed on radio being tested to avoid transmitter damage.

NOTE

Make no connection to either BNC connector on test set.

- (3) Remove thumbscrew from left side (nearest ANT connector) of test set to release handle.

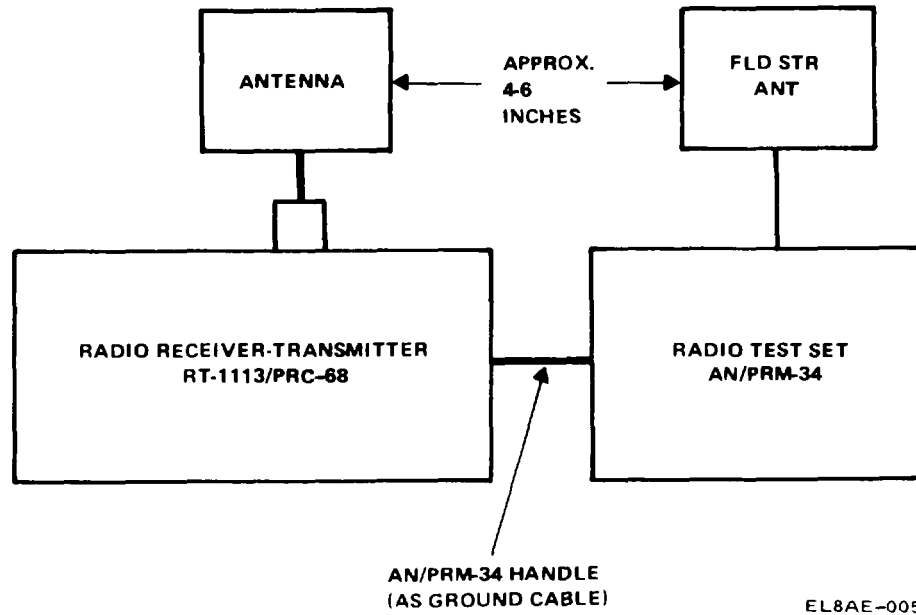


Figure 2-7. Test Set and AN/PRC-68 Field Strength Test Interconnection Diagram

- (4) Secure handle to tapped hole near antenna of AN/PRC-68 using same thumbscrew, held captive to handle.
- (5) Align test set field strength antenna parallel to and approximately 4 inches from radio antenna.
- (6) Set MODE switch to FLD STR.
- (7) Push and release test set PUSH TO TEST switch. Operate handset PTT to key transmitter.

NOTE

Field strength circuitry includes a delay (approx. 45 sec) before turning off, to allow technician to adjust transmitter.

NOTE

If display is "00.0", increase distance between field strength and radio antennas until display is less than the maximum indication of "99.9".

- (8) Adjust L1 of AN/PRC-68 for peak reading on test set display.

TM 11-6625-3015-14

- (9) Release handset PTT switch when transmitter tuning is complete.
- (10) Remove test set handle from AN/PRC-68 radio and reinstall to left side of test set. Secure with thumbscrew.

h. Test Set Turn Off Procedure.

- (1) Set MODE switch to OFF CHK.
- (2) Disconnect all cables to test set.

2-4. STORAGE. If test set is to be stored longer than 30 days, the battery shall be removed.

2-5. PREPARATION FOR MOVEMENT.

a. S.N. 1 through 634.

- (1) Place manual and test cable into slot at rear of transit case padding.
- (2) Place test set into cutout in padding.
- (3) Secure transit case lid by closing and fastening two clamps at front.

b. S.N. 635 and Up.

- (1) Place manual on top of test set.
- (2) Place test cable on top of manual.
- (3) Place antenna adapter into round cutout in padding.
- (4) Secure transit case lid by closing and fastening two clamps at front.

2-6. INSTRUCTION PLATES. There are two instruction plates fastened inside the top cover of the test set.

a. The first plate is in view when top cover is open. Instructions on this plate are shown in figure 2-8.

PRM-34 OPERATING INSTRUCTIONSPRM-34 USED WITH PRC-77 AND VRC-12 RADIOS

- STEP 1 - ALLOW 5 MINUTES WARM-UP FOR RT-524, RT-246 OR R-442 PRIOR TO USING PRM-34.
- STEP 2 - CHECK PRM-34 BATTERY CONDITION BY PLACING MODE SWITCH IN "OFF CHK" AND OPRESSING "PUSH TO TEST" BUTTON. DISPLAY WILL READ 1.000 OR 01.000 MHZ.
- STEP 3 - CONNECT PRM-34 "ANT" CONNECTOR TO ANTENNA FEEDLINE AND "RADIO" CONNECTOR TO RADIO UNDER TEST RF OUTPUT CONNECTOR.
- STEP 4 - PERFORM DESIRED PERFORMANCE CHECK AS INDICATED BELOW.
- A SENSITIVITY: TURN UP RADIO VOLUME CONTROL, PLACE RADIO IN SQUELCH OFF. DISCONNECT ANTENNA FEEDLINE, SET FREQUENCY TO 30, 35, 40, 45, 50, 55, 60, 65, 70 OR 75,000 MHZ, PLACE PRM-34 IN "SENS SO" MODE AND DEPRESS "PUSH TO TEST" BUTTON; RECEIVER NOISE SHOULD BE QUIET.
- B SQUELCH: TURN UP VOLUME CONTROL. DISCONNECT ANTENNA FEEDLINE, PLACE RADIO IN SQUELCH ON, SET FREQUENCY TO 75,000 MHZ. PLACE PRM-34 IN "SENS SO" MODE AND DEPRESS "PUSH TO TEST" BUTTON; RECEIVER SQUELCH WILL OPEN AND A LOW LEVEL TONE WILL BE HEARD.
- C FREQUENCY: CONNECT ANTENNA FEEDLINE; PLACE RADIO IN HIGH POWER MODE; PLACE PRM-34 IN "FREQ" MODE; KEY RADIO; AFTER FIVE SECONDS, DEPRESS "PUSH TO TEST" SUTTON; AFTER THREE SECONDS, TRANSMIT FREQUENCY WILL BE DISPLAYED.

EL&AE=310

Figure 2-8. Instruction Plate Sheet 1 Instructions

- b. Lift first plate for access to second plate. Instructions on this plate are shown in figure 2-9.

Section III. OPERATION UNDER UNUSUAL CONDITIONS

2-7. OPERATION UNDER EMERGENCY CONDITIONS .

- a. Operation with Low Battery Voltage.

CAUTION

DO NOT attempt to operate test set if battery voltage under load is below four volts or if BIT indicates test set is defective.

- b. Operation with Random Length Antenna.

(1) Test set may be used for field strength test if field strength antenna is bent or broken.

D. FORWARD POWER: MAKE SURE CONNECTIONS ARE AS INDICATED IN STEP 3 ABOVE. PLACE RADIO IN HIGH OR LOW POWER; PLACE PRM-34 IN "FWD PWR" MODE; KEY RADIO; AFTER FIVE SECONDS, DEPRESS "PUSH TO TEST" BUTTON; AFTER THREE SECONDS, TRANSMIT POWER FROM RADIO TO ANTENNA WILL BE DISPLAYED.

E. REFLECTED POWER: MAKE SURE CONNECTIONS ARE AS INDICATED IN STEP 3 ABOVE. PLACE RADIO IN HIGH OR LOW POWER; PLACE PRM-34 IN "RVS PWR" MODE; KEY RADIO; AFTER FIVE SECONDS, DEPRESS "PUSH TO TEST" BUTTON; AFTER THREE SECONDS, TRANSMIT POWER REFLECTED BACK FROM ANTENNA WILL BE DISPLAYED.

PRM-34 USED WITH PRC-68 RADIO

THE PRM-34 MAY BE USED IN THE FIELD STRENGTH MODE TO ADJUST THE PRC-68 ANTENNA COUPLER INDUCTOR (L1) FOR MAXIMUM RADIATED POWER. SEE APPROPRIATE PRC-68 INSTRUCTION MANUAL FOR PROPER ADJUSTMENT PROCEDURES. TO USE THE PRM-34 WITH THE PRC-68 FOR FIELD STRENGTH MEASUREMENTS FOLLOW THE STEPS BELOW.

STEP 1 - CHECK PRM-34 BATTERY CONDITION BY PLACING MODE SWITCH IN "OFF CHK" AND OPRESSING "PUSH TO TEST" BUTTON. DISPLAY WILL READ 1.000 OR 01.000 MHZ.

STEP 2 - DISCONNECT LEFT END OF PRM-34 HANDLE. CONNECT TO TAPPED HOLE NEAR PRC-68 ANTENNA POST.

STEP 3 - RELEASE FIELD STRENGTH ANTENNA FROM HOLD DOWN SCREW. ANTENNA SHOULD STAND ROUGHLY VERTICAL, ABOUT FIVE INCHES FROM PRC-68 ANTENNA.

STEP 4 - PLACE PRM-34 MODE SWITCH IN "FLD STR" POSITION. DEPRESS AND RELEASE "PUSH TO TEST" BUTTON. PRM-34 WILL TURN ON AND OPERATE FOR APPROXIMATELY 40 SECONDS TO FREE HANDS FOR ADJUSTMENT OF PRC-68.

EL8AE-011 1

Figure 2-9. Instruction Plate Sheet 2 Instructions

(2) If field strength antenna is defective, reduced signal strength display will occur.

(3) Other functions of the test set will not be affected by an antenna defect.

2-8. OPERATION IN UNUSUAL WEATHER. Test set may be used in adverse weather conditions, such as rain and snow.

Table 2-1. Test Data Documentation
Summary Sheet

Receiver-Transmitter _____ Date _____

Serial # _____ Control # _____

FREQUENCY		WATTS		FREQUENCY		WATTS	
1. _____	ok _____ b a d _____	_____	FWD RFL	6. _____	ok _____ b a d _____	_____	FWD RFL
FREQUENCY		WATTS		FREQUENCY		WATTS	
2. _____	ok _____ b a d _____	_____	FWD RFL	7. _____	ok _____ b a d _____	_____	FWD RFL
FREQUENCY		WATTS		FREQUENCY		WATTS	
3. _____	ok _____ b a d _____	_____	FWD RFL	8. _____	ok _____ b a d _____	_____	FWD RFL
FREQUENCY		WATTS		FREQUENCY		WATTS	
4. _____	ok _____ b a d _____	_____	FWD RFL	9. _____	ok _____ b a d _____	_____	FWD RFL
FREQUENCY		WATTS		FREQUENCY		WATTS	
5. _____	ok _____ b a d _____	_____	FWD RFL	10. _____	ok _____ b a d _____	_____	FWD RFL

SQUELCH SENSITIVITY 30-75 MHZ _____

SUMMARY : FREQ _____ REMARKS _____
 FWD _____
 RFL _____
 SQUELCH _____ 75 MHz
 SQUELCH SENS _____ Inspected by _____

CHAPTER 3

OPERATOR AND ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

SECTION I. REPAIR PARTS, SPECIAL TOOLS, TMDE, AND
SUPPORT EQUIPMENT

3-1. COMMON TOOLS AND EQUIPMENT. For authorized tools and equipment, refer to Modified Table of Organization and Equipment (MTOE) applicable to your unit.

3-2. SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT. No special tools or support equipment are required.

3-3. REPAIR PARTS. Repair parts are listed and illustrated in the Repair Parts and Special Tools List (RPSTL), TM 11-6625-3015-24P.

SECTION II. ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS)

3-4. GENERAL. To ensure that the test set is always ready for use, it must be inspected often so defects *may* be discovered and corrected before they result in serious damage or failure. The necessary preventive maintenance checks and services to be performed are listed in table 3-1. Defects noted during operation shall be listed prior to continuation of operation.

 WARNING

If the battery or battery compartment shows signs of overheating or becomes hot to the touch, if you hear a hissing sound (i.e., battery venting), or smell irritating S₀2 gas, IMMEDIATELY Turn Off the equipment, and/or LEAVE the area until any smell or signs of leaking gas have been cleared from the *area*.

a. *Before You Operate.* Always keep in mind the CAUTIONS and WARNINGS. Perform your inspection before (B) PMCS (table 3-1) .

b. *while You Operate.* Always keep in mind the CAUTIONS and WARNINGS. Perform your inspection during (D) PMCS.

TM 11-6625-3015-14

Table 3-1. Preventive Maintenance Checks and Services

B - Before Operation D - During Operation
 A - After Operation M - Monthly

Item no.	Interval				Item to be inspected Procedure	Equipment is not ready/ Available if:
	B	D	A	M		
1		• •			COEI Check to see that all components are available.	Any component missing.
2		•			Instruction Plates Check to see that instruction plates are complete and attached.	Plates missing or not readable.
3		•			Display Window Check to see that window is not cracked or severely scratched.	Display not readable.
4		•			ANT and RADIO Connectors Check to see that connectors are not bent or damaged.	Bent or damaged.
5		•			FLD STR ANT Check to see that antenna is not bent or broken.	Loose, bent, or broken.
6		•			Test Set Perform built-in-test (BIT). See figure 2-3 for BIT procedures.	Display other than "1.000" or "01.000.-"

b. While You Operate. Always keep in mind the CAUTIONS and WARNINGS . Perform your inspection during (D) PMCS.

c. After You Operate. Be sure to perform your inspection after (A) PMCS.

d. If Your Equipment Fails to Operate. Troubleshoot with proper equipment. Report any deficiencies using proper forms. See DA Pam 738-750.

Section III. TROUBLESHOOTING

3-5. GENERAL . Organization level troubleshooting is limited to running the built-in-test. Figure 2-3 shows the procedures for performing a built-in-test. If the proper result is not obtained, send the unit to a maintenance/repair site.

Section IV. MAINTENANCE PROCEDURES

3-6. GENERAL . Periodically check to see that knob, connectors, and antenna are in proper condition and that MODE switch is operative. During use, check for proper display indications (no fluctuations or missing digit segments) and secure connections. Operating receiver-transmitter with poor connections can damage transmitter.

3-7. CLEANING. Clean the AN/PRM-34 with a soft cloth. Do not use abrasive materials or cleansers to clean the painted surfaces or display window.

3-8. REPAIR. The only repair authorized at this level is replacement of the battery.

—————
 WARNINGS
 —————

A lithium-sulfur dioxide (Li-So₂) battery used with the equipment contains pressurized sulfur dioxide (S₀2) gas. The gas is toxic, and the battery MUST NOT be abused in any way which may cause the battery to rupture.

DO NOT heat, short circuit, crush, puncture, mutilate, or disassemble batteries.

WARNINGS

Do NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the plastic wrap, a swollen plastic wrap, etc.

DO NOT test Li-S02 batteries for capacity.

DO NOT recharge Li-S02 batteries.

CAUTION

ONLY use batteries which have been authorized for this equipment

a. If test set fails BIT, replace the battery and perform BIT again.

b. If test set fails BIT with new battery installed, send the unit to a general support maintenance facility for troubleshooting and repair.

3-9. BATTERY REPLACEMENT. If BIT indicates a possibly defective battery, replace battery as follows.

a. Place test set face down on work surface,

b. Unscrew six (four, S.N. 635 and up) captive screws (3, fig 5-3).

c. Remove bottom cover assembly (4).

d. Disconnect battery connector (P3).

e. Remove battery. (See paragraph 3-10 for disposition of old battery.)

- f. Connect new battery to battery connector (P3).
- g. Place battery into position in battery retainer (6).
- h. Place bottom cover assembly (4) into position.
- i. Secure the six (four, S.N. 635 and up) captive screws (3).

3-10. BATTERY DISPOSITION. Prior to ALL battery deposition/disposal actions, coordinate with your local Installation/Unit Environmental Office/Officer (IEO) to ensure compliance with all federal, state and local solid waste regulations.

NOTE

Refer to TB43-0134, Battery Disposition and Disposal for additional information regarding battery disposal.

CAUTION

DO NOT accumulate or store waste batteries for disposal for more than ninety (90) days.

a. *Li-SO₂ battery identification.* Most Li-SO₂ batteries produced after January 1989 have a built-in Complete Discharge Device (CDD). Batteries with a CDD can be identified by an attention label over the switch which reads as follows:

“ATTENTION
Before Disposal
Remove this Label and
Push Switch”,

and a card packed with each battery which reads as follows:

“ATTENTION

THIS BATTERY HAS A DISCHARGE SWITCH IN ORDER TO MAKE IT NON-REACTIVE. AFTER FINAL USE, REMOVE ATTENTION LABEL COVERING THE SWITCH, AND STORE BATTERY FOR FIVE DAYS. COORDINATE DISPOSAL WITH YOUR LOCAL ENVIRONMENTAL OFFICE/OFFICER. STATE/LOCAL REGULATIONS WILL CONTROL DISPOSAL IN YOUR AREA.*”

b. LI-SO₂ battery with built-in CDD.

WARNING

If the battery or battery compartment shows signs of overheating or becomes hot to the touch, if you hear a hissing sound (i.e., battery venting), or smell irritating SO₂ gas, IMMEDIATELY Turn Off the equipment, and/or LEAVE the area until any smell or signs of leaking gas have been cleared from the area.

DO NOT pack batteries until they are cool to the touch.

CAUTION

Li-SO₂ batteries will generate heat upon discharge with the built-in complete discharge device.

Federal and state environmental regulations prohibit reactive waste disposal with general refuse.

- (1) If the battery has a CDD, the CDD should be activated after final use and prior to disposal.
- (2) When discharging Li-SO₂ batteries:

WARNINGS

If battery is damaged, malfunctions, or shows signs of overheating; e.g., too hot to hold during discharge, a melted plastic case, or a vented cell, you CAN NOT ensure that it will properly discharge. DO NOT attempt to discharge these batteries, and they MUST be disposed as reactive hazardous waste (i.e., DO03).

DO NOT pack batteries in a box, barrel, or drum, or tightly stack on a shelf, during initial discharge with a built-in CDD.

- (a) Push switch to discharge battery. Temporarily store battery (ies) on a shelf or floor in a cool, dry, and well ventilated area, approved for Li-SO₂ battery storage, for at least five days, and less than ninety (90) days. During discharge, provide a minimum of at least two (2) inches between all batteries.

- (b) DO NOT package for disposition/disposal until the batteries are cool to the touch.
- (c) Completely discharged Li-SO₂ batteries are non-reactive waste under federal regulations, and they may be considered non-hazardous solid waste, if state and local regulation permit.

c. *Li-SO₂ battery without a built-in CDD.* If the Li-SO₂ battery does not have a CDD, it Must Be disposed as reactive hazardous waste (i.e., DO03) under federal regulations.

d. *Disposal of batteries.*

- (1) Most state regulations will allow for the disposal of completely discharged lithium batteries (i.e., non-reactive) as non-hazardous solid waste. Some state's environmental regulations may be more stringent. Coordination with the local IEO is required prior to disposal of completely discharged Li-SO₂ batteries.
- (2) Hazardous waste should be disposed through the local servicing Defense Reutilization and Marketing Office (DRMO), or via local contract with local IEO approval. The DRMO will require completion of a DD Form 1348-1, Disposal Turn-in Document, for any turn-in to their activity.

CHAPTER 4

DIRECT SUPPORT MAINTENANCE INSTRUCTIONS

4-1. SCOPE. No direct support maintenance of the Radio Test Set AN/PRM-34 is authorized.

4-1/4-2(blank)

CHAPTER 5

GENERAL SUPPORT MAINTENANCE INSTRUCTIONS

Section I. GENERAL

5-1. SCOPE. This chapter indicates duties and procedures for general support maintenance, testing, troubleshooting, and alignment of the test set.

5-2. MAINTENANCE DUTIES. General support maintenance of the test set is limited to testing and alignment of modules, and removal and replacement of modules.

Section II. REPAIR PARTS, SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT

5-3. TOOLS AND EQUIPMENT. All tools and equipment required for general support maintenance are listed in the Maintenance Allocation Chart (appendix B).

5-4. SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT. Refer to Repair Parts and Special Tools List (RPSTL) (TM 11-6625-3015-24P) for information. One special tool is required, and details for local manufacture are contained in appendix F.

Cable - required to perform field strength circuit test.
(See figure F-1.)

5-5. REPAIR PARTS. Repair parts are listed and illustrated in TM11-6625-3015-24P.

Section III. THEORY OF OPERATION

5-6. FUNCTIONAL DESCRIPTION. Refer to paragraph 1-13 and figure 1-3 for functional description of test set.

Change 1 5-1

Section IV. TROUBLESHOOTING

5-7. GENERAL. General support troubleshooting is limited to fault isolation to the modular level. An interconnection schematic diagram (fig. 5-1) is provided as an aid to troubleshooting.

NOTE

For performance of troubleshooting procedures, it is assumed that only one trouble source exists.

5-8. TROUBLESHOOTING PROCEDURES. General support troubleshooting procedures direct the technician to the most likely module to have failed.

5-9. MODULE REPLACEMENT. For replacement of any module, refer to paragraph 5-12 for disassembly procedures. Disassemble only to the extent necessary to replace module indicated defective.

5-10. SYMPTOM INDEX. Refer first to symptom index (table 5-1) for directions for entering troubleshooting logic tree. In some cases, one trouble source may create more than one symptom. Compare all symptoms and their logic tree entrance points. Read applicable flow chart sections. Suspect failure of module(s) common to all symptom references.

5-11. LOGIC TREE. Refer to logic tree (fig. 5-2). Follow directions depending on outcome or indication of last completed step. Perform orders until directed to stop.

Table 5-1. Troubleshooting Symptom Index

MODE switch position	Trouble symptom	Logic tree entrance	Page number
OFF CHK	Display complete but other than "1.000" or "01.000".	A	5-7
	Incorrect LED or more than one LED lighted.	B	5-7
	MHZ LED not lighted.	B	5-7
	No display.	B	5-7
	Invalid or unreadable display.	B	5-7
	Only two LSD positions on and indicating "00".	A	5-7
SENS SQ	Any LED lighted.	B	5-7
	Display lighted.	B	5-7
	Good radio does not break squelch.	C	5-8
	Outputs of 1 MHz intervals instead of 5 MHz.	D	5-9
FREQ	No display.	B	5-7
	MHZ LED not lighted.	B	5-7
	Incorrect LED or more than one LED lighted.	B	5-7
	Invalid or unreadable display.	B	5-7
FREQ	Only two LSD positions on and indicate "00".	E	5-10
	Incorrect frequency displayed.	F	5-11

Table 5-1. Troubleshooting Symptom Index - Continued

MODE switch position	Trouble symptom	Logic tree entrance	Page number
FWD PWR	WATTS LED not lighted.	B	5-7
	Incorrect LED <i>or</i> more than one LED lighted.	B	5-7
	No display.	E	5-10
	Invalid or unreadable display.	B	5-7
	Only two LSD positions displayed.	B	5-7
	Incorrect power indication.	E	5-10
RVS PWR	WATTS LED not lighted.	B	5-7
	Incorrect LED <i>or</i> more than one LED lighted.	B	5-7
	No display.	E	5-10
	Invalid or unreadable display.	B	5-7
	Only two LSD positions displayed.	B	5-7
	Known good antenna system shows high reflected power.	E	5-10
FLD STR	FLD STR LED not lighted.	B	5-7
	Incorrect LED <i>or</i> more than one LED lighted.	B	5-7
	No display. (S.N. 1 thru 634) (S.N. 635 and up)	B G	5-7 5-12

Table 5-1. Troubleshooting Symptom Index - Continued


MODE switch position	Trouble symptom	Logic tree entrance	Page number
FLD STR	Invalid or unreadable display.		
		(S.N. 1 thru 634)	B 5-7
		(S.N. 635 and up)	G 5-12
	Only two LSD positions displayed.		
		(S.N. 1 thru 634)	B 5-7
		(S.N. 634 and up)	G 5-12
	Display is "00000".		
		(S.N. 1 thru 634)	B 5-7
		(S.N. 634 and up)	G 5-12
	Display goes off before 30 seconds.		D 5-9
	Display remains on after 2 minutes.		D 5-9

NOTE

If display is "O" or is blank (any position of MODE switch), coaxial connectors to 2A2 module may be reversed. See figure 5-4 for proper connections.


NOTE

Check alignment before exchanging modules.

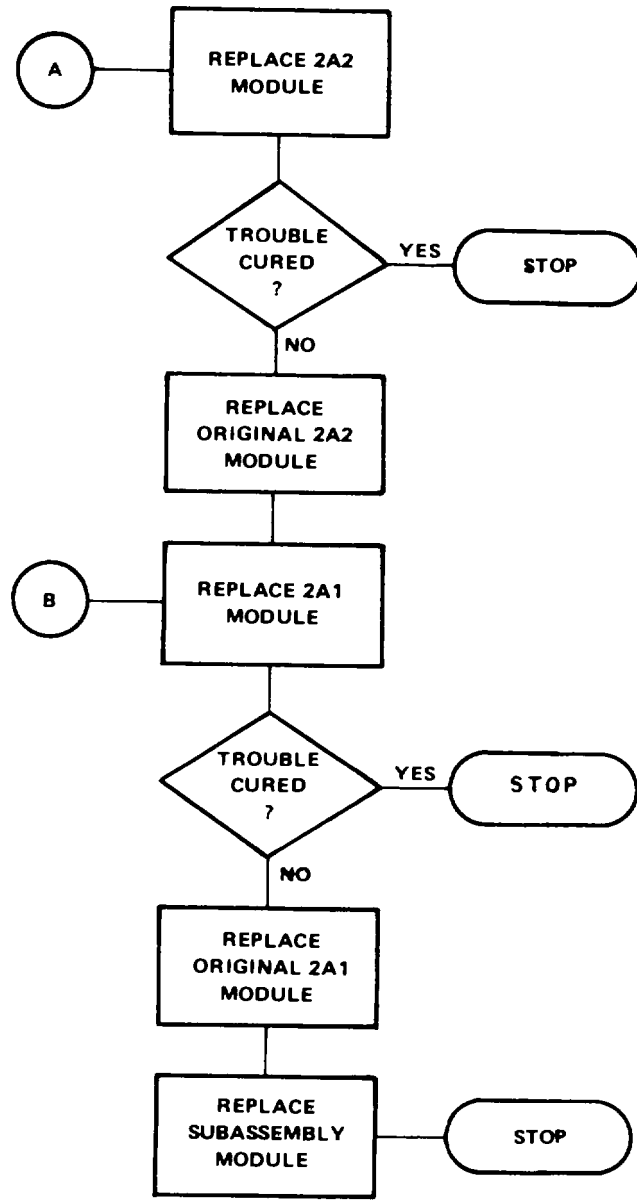

EL8AE-013

Figure 5-2. Troubleshooting Logic Tree (Sheet 1 of 6)

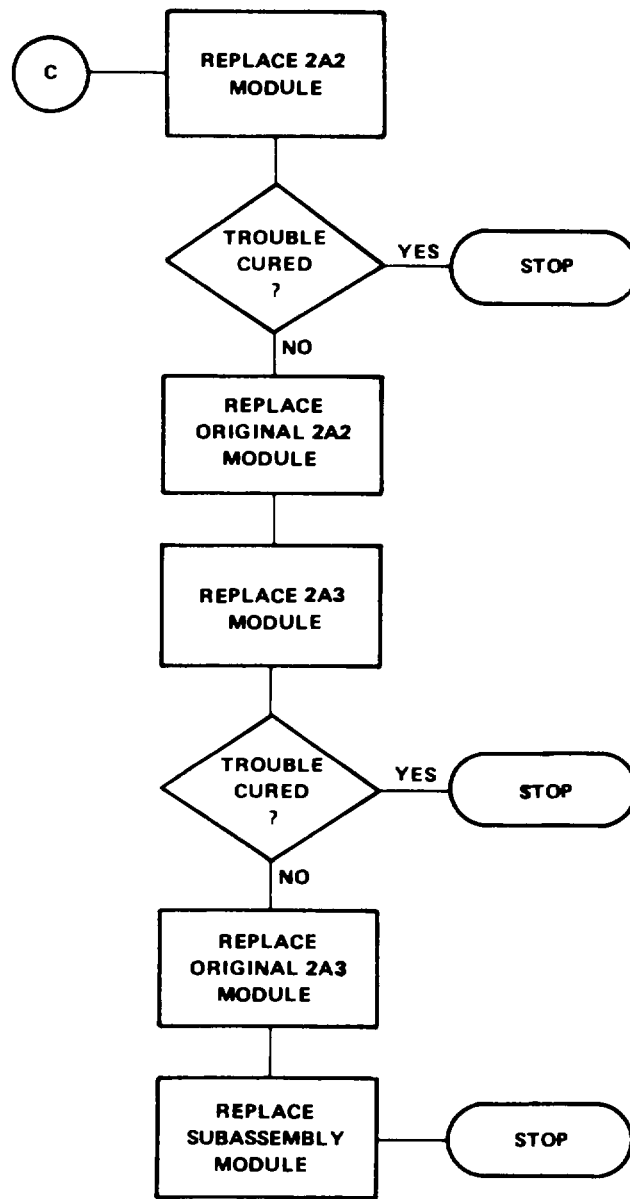

EL8AE-014

Figure 5-2. Troubleshooting Logic Tree (Sheet 2 of 6)

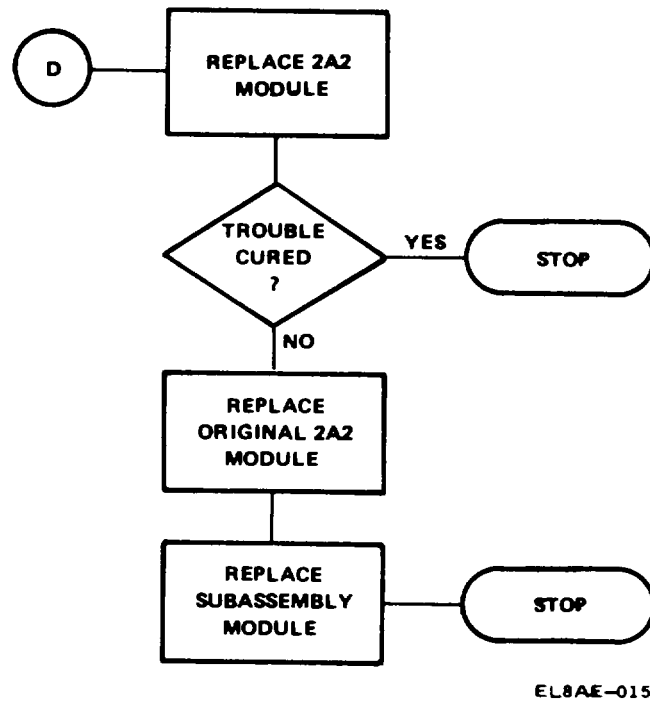


Figure 5-2. Troubleshooting Logic Tree (Sheet 3 of 6)



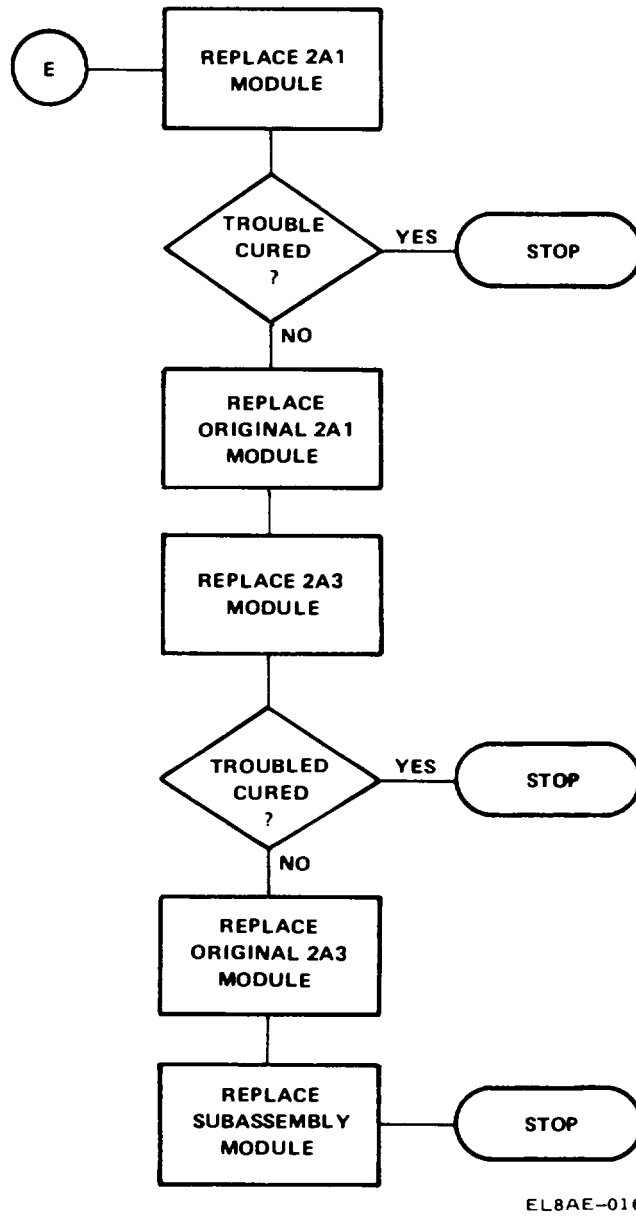


Figure 5-2. Troubleshooting Logic Tree (Sheet 4 of 6)

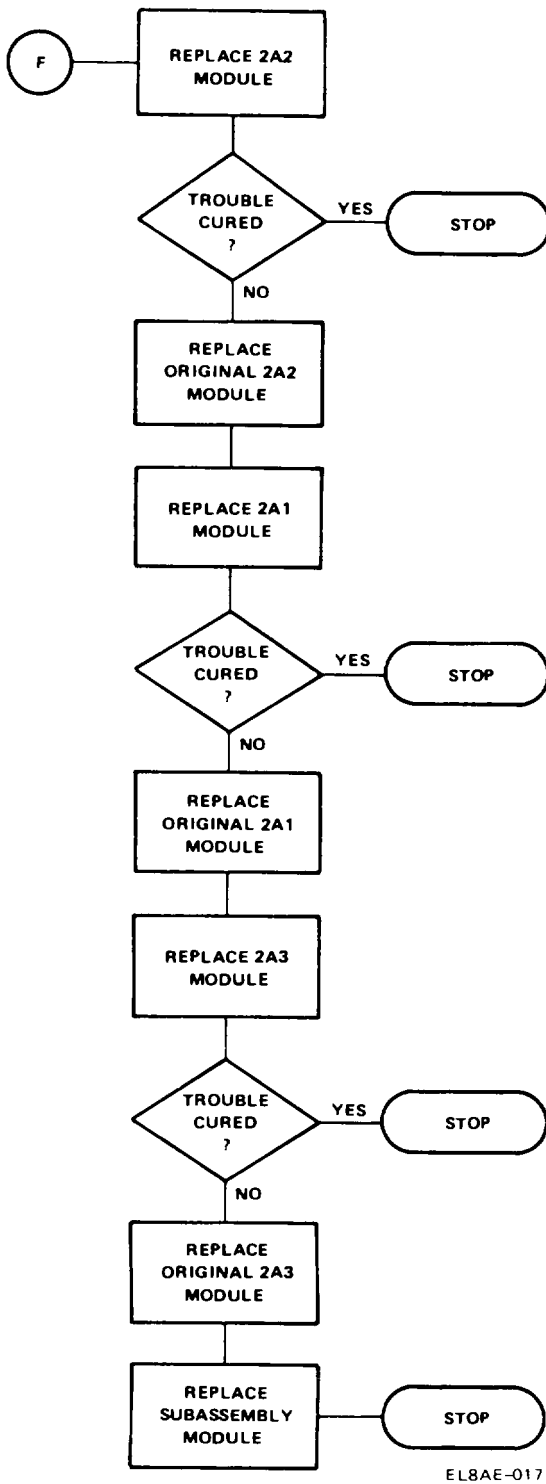

EL8AE-017

Figure 5-2. Troubleshooting Logic Tree (Sheet 5 of 6)

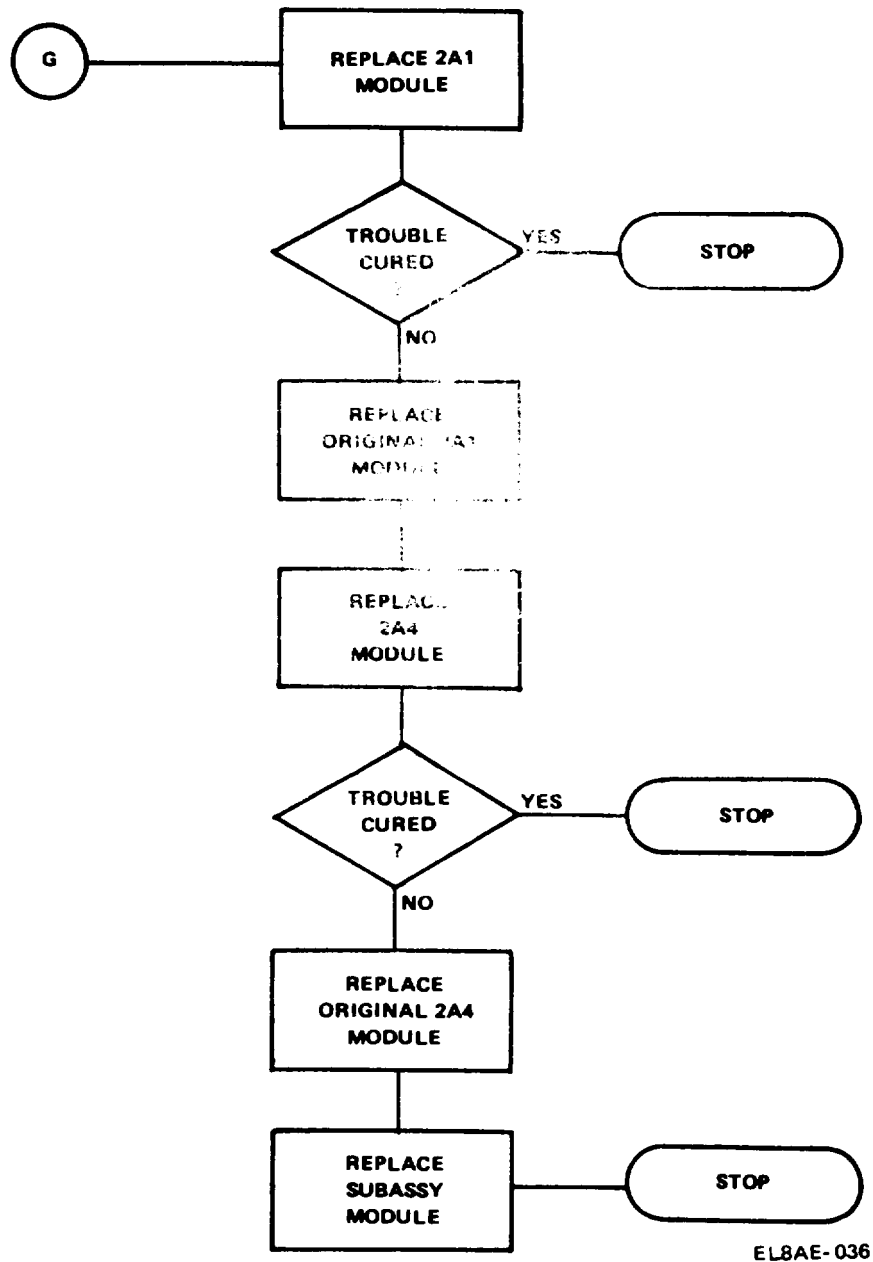

EL8AE-036

Figure 5-2. Troubleshooting Logic Tree (Sheet 6 of 6)

Section V. MAINTENANCE PROCEDURES

5-12. MAINTENANCE CONCEPT. General support maintenance is limited to replacement of modules and certain other parts and retouching of exterior painted surfaces. Retouch painted surfaces with paint, item 1, Appendix E, applied per Federal Standard 595 in accordance with MIL-C-22751. After completion of any maintenance, conduct performance tests (para 5-13) to be sure test set is in operational readiness. If 2A1 module is replaced, forward and reverse power alignment procedures (para 5-14 a, c) shall be completed following reassembly. If 2A2 module is replaced, spectrum level alignment procedure (para 5-14 d) shall be completed following reassembly. If 2A3 module is replaced, the spectrum level (para 5-14 d) and the forward and reverse power alignment procedures (para 5-149, c) shall be completed following reassembly.

a. Disassembly (S.N. 1 through 634). Procedures are limited to those needed for partial disassembly to allow removal and replacement of defective assemblies or modules. The field strength antenna may be removed and replaced without removing any other module or assembly. Before removal of battery or battery retainer, bottom cover assembly must be removed. Before removal of 2A2 module, bottom cover assembly and battery retainer must be removed. Before removal of 2A1 or 2A3 module; bottom cover assembly, battery retainer, and 2A2 module must be removed. Removal of top cover assembly or bottom cover assembly may be done without removing any other assembly or module. Removal of test set subassembly consists of removing all other assemblies and modules from the test set subassembly. Only the following may be removed and replaced.

- Top cover assembly
- Bottom cover assembly
- Battery
- Battery retainer
- 2A2 module
- 2A1 module
- 2A3 module
- Test set subassembly
- Field strength antenna

NOTE

Do not attempt disassembly beyond removal procedures in this paragraph.

(1) *Removal of top cover assembly. (See figure 5-3.)*

(a) Remove four screws (1) from top section of hinge.

(b) Remove top cover assembly (2).

LEGEND, figure 5-3

- | | |
|---------------------------|--|
| 1. Screw | 11. 2A3 Power Detector Module |
| 2. Top Cover Assembly | 12. Screw |
| 3. Captive Screw | 13. 2A4 Test Set Subassembly
(S.N. 1 through 634) |
| 4. Bottom Cover Assembly | 2A5 Chassis Subassembly
(S.N. 635 and up) |
| 5. Screw | 14. Field Strength Antenna |
| 6. Battery Retainer | 15. 2A4 Field Strength Module
(S.N. 635 and up) |
| 7. Screw | 16. Screw (S.N. 635 and up) |
| 8. 2A2 Spectrum Generator | |
| 9. 2A1 Frequency Counter | |
| 10. Screw | |

(2) *Removal of bottom cover assembly. (See figure 5-30)*


(a) Unscrew six captive screws (3).

(b) Remove bottom cover assembly (4).

(3) *Removal of battery. (See figure 5-3.)*

(a) Remove bottom cover assembly (para (2) above).

(b) Disconnect battery connector (P3).

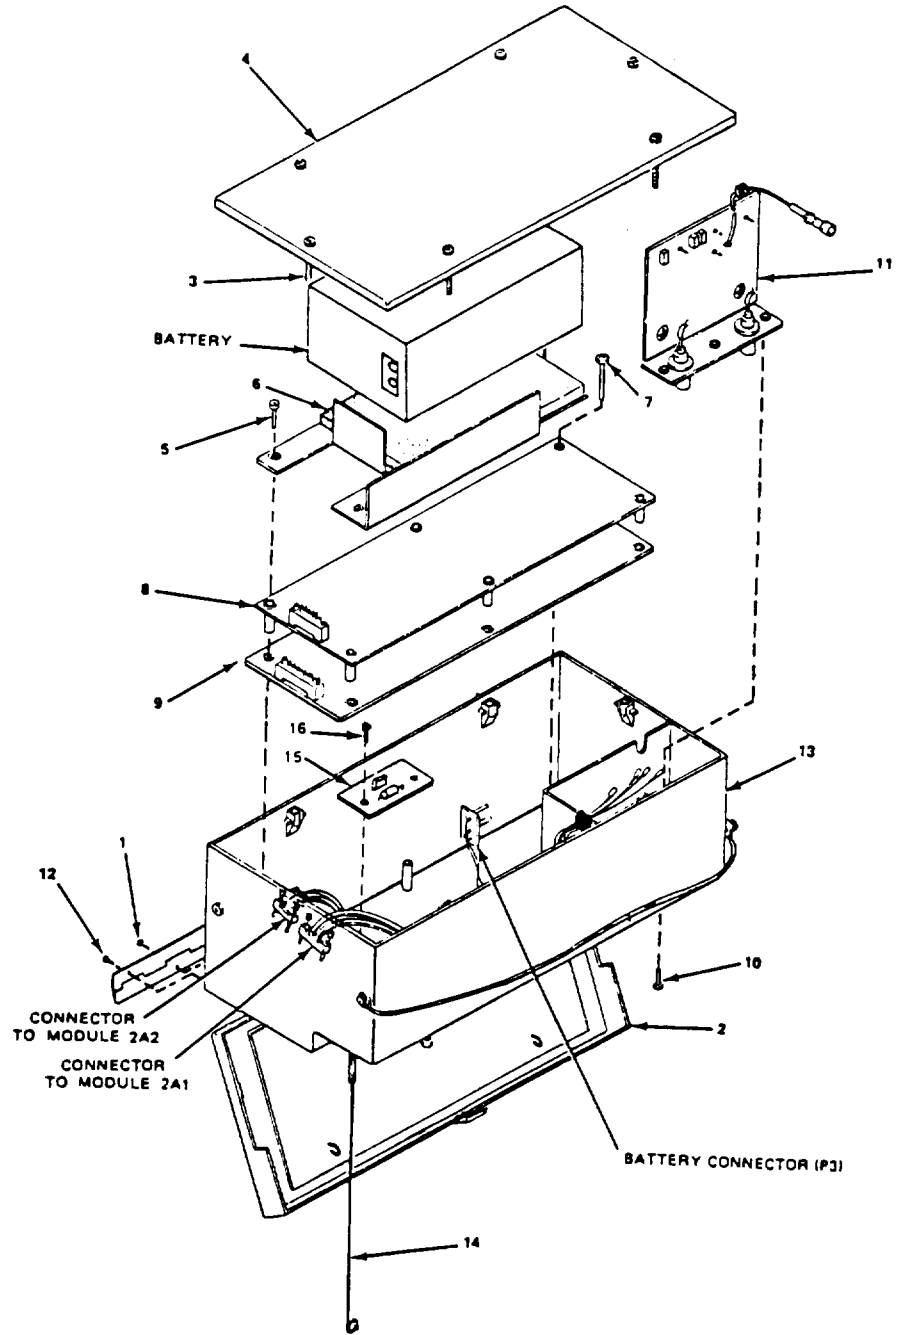

ELBAE-027

Figure 5-3. Radio Test Set TS-3951/PM-34, Exploded View

WARNINGS

A lithium-sulfur dioxide (LiSO₂) battery used to power the test set contains pressurized sulfur dioxide (SO₂) gas. The gas is toxic, and the battery must not be abused in any way that may cause the battery to rupture.

DO NOT heat, short circuit, crush, puncture, mutilate, open, or disassemble batteries.

DO NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the wrap, a swollen plastic wrap, etc.

DO NOT USE any battery which does not easily fit into the battery compartment.

CAUTION

DO NOT dispose of lithium batteries with ordinary trash/refuse. Use proper disposition and disposal procedures (paragraph 3-10).

CAUTION

ONLY use batteries which have been authorized for this equipment.

- (c) Remove battery.
- (4) Removal of battery retainer. (See figure 5-3).
 - (a) Remove battery (para (3) above) .
 - (b) Remove four screws (5).
 - (c) Remove battery retainer (6).

(5) Removal of 2A2 module. (See figure 5-3).

(a) Remove battery retainer (para (4) above.)

CAUTION

Screws must be loosened alternately to prevent damage to connector

(b) Alternately loosen two captive screws two or three turns, disconnecting connector from 2A2 module.

(c) Remove two screws (7).

- (d) Rotate unit so that end nearest ANT connector is facing you.

CAUTION

Standard precautionary static electricity techniques should be used when handling 2A1 or 2A2 module. These modules contain components sensitive to static electricity.

- (e) Observe figure 5-4. Carefully lift 2A2 module (8), swinging it into position as shown in figure 5-4.

CAUTION

Coaxial connectors to 2A2 module are very delicate. Handle as little as necessary.

- (f) Disconnect coaxial connectors from 2A2 module.
 - (g) Carefully remove 2A2 module (8).
- (6) Removal of 2A1 module. (See figure 5-3.)
- (a) Remove 2A2 module (para (5) above).

CAUTION


Screws must be loosened alternately to prevent damage to connector.

- (b) Alternately loosen two captive screws which secure connector to 2A1 module (9) two or three turns.
- (c) Disconnect connector.

CAUTION

Standard precautionary static electricity techniques should be used when handling 2A1 or 2A2 module. These modules contain components sensitive to static electricity.

- (d) Carefully remove 2A1 module (9).
- (7) Removal of 2A3 module. (See figure 5-3.)
- (a) Remove 2A2 module para (5) above).

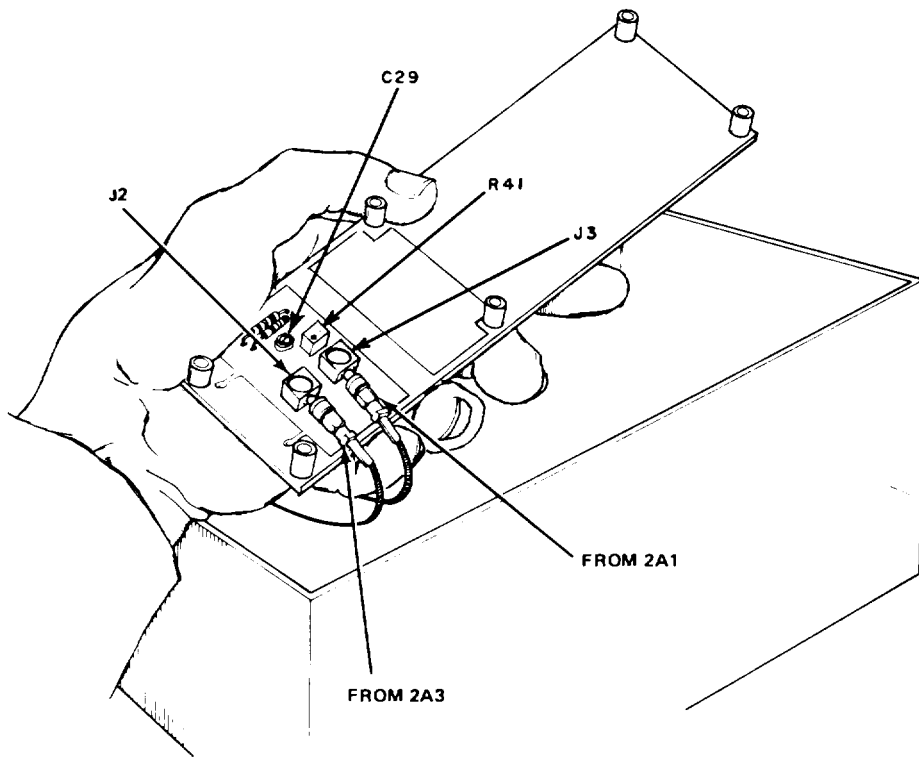


NOTE:

THIS FIGURE APPLIES ONLY TO S. N. 1 THROUGH 634. ON S.N. 635 AND UP, J2 AND J3 ARE DISCONNECTED BEFORE LIFTING 2A2 MODULE. SEE FIGURE 5.6 FOR LOCATIONS OF J2 AND J3 ON S.N. 635 AND UP.

EL8AE-020

■ Figure 5-4. Removing 2A2 Module

- (b) Release coaxial cable grommet (see fig. 5-5) from test set subassembly (13).
- (c) Use needlenose pliers to disconnect four wires from pin connectors on 2A3 module.
- (d) Remove three screws (10).
- (e) Being careful to avoid contacting standoff (see fig. 5-5), lift 2A3 module (11) from test set subassembly (13).

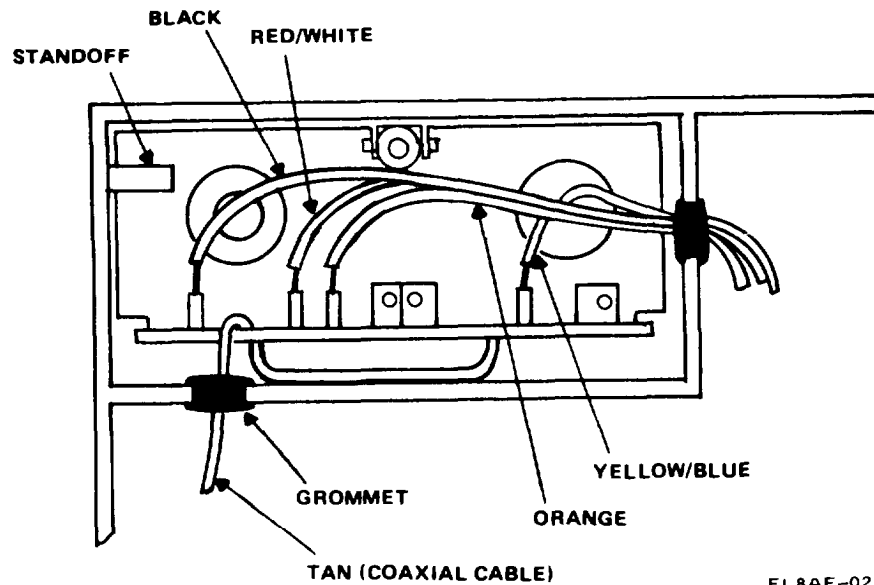

EL8AE-022

Figure 5-5. Connections to 2A3 Module

- (8) *Removal of test set subassembly.* (See figure 5-3.)
- (a) Remove three screws (12) from bottom section of hinge.
 - (b) Remove 2A1 module (para (6) above).
 - (c) Perform procedures (7)(b) through (e) above.
 - (d) Test set subassembly (13) is now removed from other parts.
- (9) *Removal Of field strength antenna.* (See figure 5-3.)
- (a) Open top cover assembly (2).
 - (b) Remove screw attaching field strength antenna (14).
 - (c) Remove field strength antenna (14).

b. Disassembly (S.N. 635 and Up). Procedures are limited to those needed for partial disassembly to allow removal and replacement of defective assemblies or modules. The field strength antenna, top cover assembly, or bottom cover assembly may be removed and replaced without removing any other module or assembly. Removal of 2A3 or 2A4 module requires first removing

bottom cover assembly. Bottom cover and battery retainer must be removed to allow removal of 2A2 module, while all three must be removed to allow removal of 2A1 module. Removal of chassis subassembly consists of removing all other assemblies and modules from the subassembly. Only the following may be removed and replaced:

- Top cover assembly
- Bottom cover assembly
- Battery
- Battery retainer
- 2A4 module
- 2A3 module
- 2A2 module
- 2A1 module
- Field strength antenna
- 2A5 chassis subassembly

NOTE

Do not attempt disassembly beyond removal procedures in this paragraph.

(1) Removal of top cover assembly. <See figure 5-3.>

- (a) Remove four screws (12) from bottom section of hinge.
- (b) Remove top cover assembly (2).

(2) Removal of bottom cover assembly. (See figure 530)

- (a) Unscrew four captive screws (3).
- (b) Remove bottom cover assembly (4).

(3) Removal of battery. (See figure 5-3.)

- (a) Remove bottom cover assembly (para (2) above).
- (b) Disconnect battery connector (P3).

WARNINGS

A lithium-sulfur dioxide (LiSO₂) battery used to power the test set contains pressurized sulfur dioxide (SO₂) gas. The gas is toxic, and the battery must not be abused in any way that may cause the battery to rupture.

DO NOT heat, short circuit, crush, puncture, mutilate, open, or disassemble batteries.

DO NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the wrap, a swollen plastic wrap, etc.

DO NOT USE any battery which does not easily fit into the battery compartment.

CAUTION

DO NOT dispose of lithium batteries with ordinary trash/refuse. Use proper disposition and disposal procedures (para3-10).

CAUTION

ONLY use batteries which have been authorized for this equipment.

(c) Remove battery.

(4) Removal of battery retainer. (See figure 5-3.)

(a) Remove battery (para(3) above).

- (b) Remove four screws (5).
- (c) Remove battery retainer (6).
- (5) Removal of 2A4 module. (See figure 5-3.)
 - (a) Remove battery (para (3) above).
 - (b) Disconnect wires from J1 and J2 of 2A4 module. (See figure 5-6.)
- (6) Removal of 2A3 module. (See figure 5-3.)
 - (a) Remove battery (para (3) above).
 - (b) Disconnect coaxial lead from J2 on 2A2 module. (See figure 5-6.)

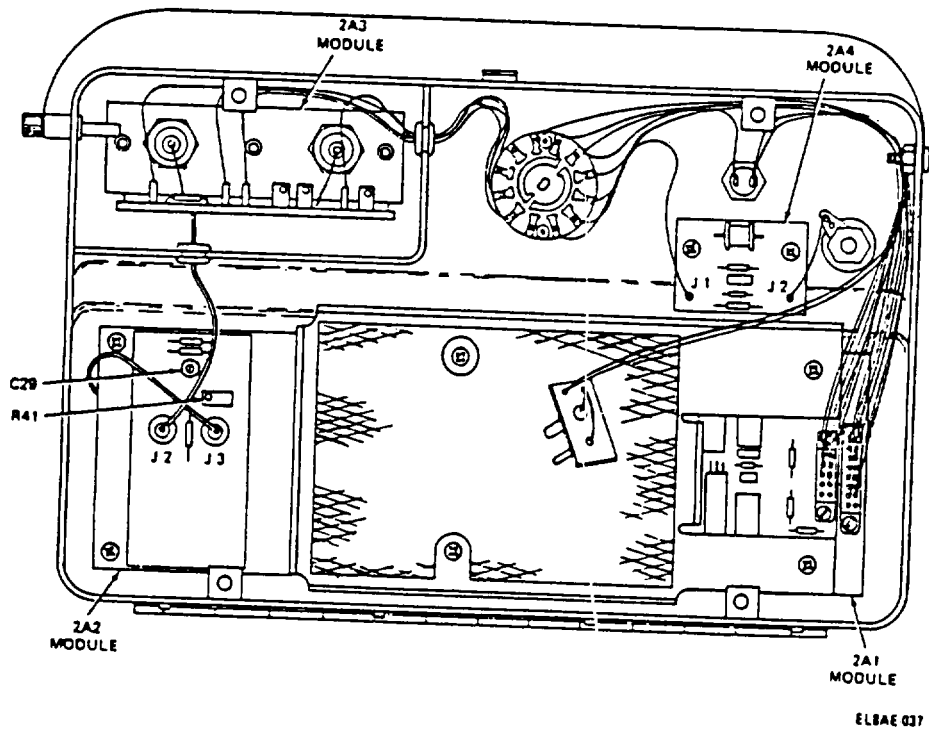


Figure 5-6. Test Set (S.N. 635 and Up) Interior View from Bottom

(c) Release coaxial cable grommet (see fig. 5-5) from chassis subassembly (13, fig. 5-3).

(d) Use needlenose pliers to disconnect four wires from pin connectors on 2A3 module.

(e) Remove three screws (10).

(f) Be careful to avoid contacting standoff (see fig. 5-5), lift 2A3 module (11) *from* chassis subassembly (13, fig. 5-3).

(7) Removal of 2A2 module. (See figure 5-3)

(a) Remove battery retainer (para (4) above).

CAUTION

Screws must be loosened alternately to prevent damage to connector.

- (b) Alternately loosen two captive screws two or three turns , disconnecting connector from 2A2 module.
- (c) Remove two *screws* (7).

CAUTIONS

Standard precautionary static electricity techniques should be used when handling 2A1 or 2A2 module. These modules contain components sensitive to static electricity.

Coaxial connectors to 2A2 module are very delicate. Handle as little as necessary.

- (d) Disconnect coaxial connectors to 2A2 module J2 and J3 (see fig. 5-6) and carefully remove 2A2 module (8).

(8) *Removal of 2A1 module.*

- (a) Remove 2A2 module (para (7) above).

CAUTION

Screws must be loosened alternately to prevent damage to connector.

- (b) Alternately loosen two captive screws which secure connector to 2A1 module (9) two or three turns.
- (c) Disconnect connector.

CAUTION

Standard precautionary static electricity techniques should be used when handling A1 or A2 module. These modules contain components sensitive to static electricity.

- (d) Carefully remove 2A1 module (9).

(9) *Removal of field strength antenna.* (See figure 5-3.)

- (a) Open top cover (2).

(b) Free tip of field strength antenna (14).

(c) Remove screw securing antenna.

(d) Remove antenna (14).

(10) Removal of 2A5 chassis subassembly.

(a) Remove top cover assembly (para (1) above).

(b) Remove field strength antenna (para (9) above).

(c) Remove 2A4 module (para (5) above).

(d) Remove 2A1 module (para (8) above).

(e) Perform steps (6) (c) through (f) above.

c. *Cleaning.*

(1) Remove sand, dust, loose dirt, and moisture from exterior surfaces with clean, soft cloth.

(2) Clean exterior surfaces of other foreign matter by using soft cloth dampened with mild soap and water.


d. *Inspection.* Inspect modules and parts as indicated by the following list:


Assembly/part	Possible defects
Display window	Cracks, scratches
Circuit card assemblies	Cracks, loose components, signs of overheating
Gaskets	Loose, broken
Antenna	Loose, broken, deformed
Knob	Loose, cracked
Circuit card connectors	Loose, cracked
Coaxial connectors	Loose, foreign objects


e. *Reassembly (S.N. 1 through 634).* These procedures provide instructions for reassembling the test set from various states of partial disassembly as required for removal of defective modules or assemblies. (See para a above.) Procedures are provided to cover reassembly following removal of the following:

- Field strength antenna
- Test set subassembly
- 2A3 module
- 2A1 module
- 2A2 module
- Battery retainer
- Battery
- Bottom cover assembly
- Top cover assembly

NOTES

If 2A1 module is replaced, forward and reverse power alignment procedures (para 5-142, c) shall be completed following reassembly. 

If 2A2 module is replaced, spectrum level alignment procedure (para 5-14cJ) shall be completed following reassembly. 

If 2A3 module is replaced, the spectrum level alignment (para 5-14d) and the forward and reverse power alignment procedures (para 5-14 a,c) shall be completed following reassembly. 

- (1) *Field strength antenna.* (See figure 5-3.)
 - (a) Position antenna (14).
 - (b) Secure with screw.
- (2) *Test set subassembly.* (See figure 5-3.)
 - (a) Replace 2A3 module as in paragraphs (3)(a) through (d) below.
 - (b) Replace 2A1 module as in paragraph (4) below.
- (3) *2A3 module.* (See figure 5-3.)

CAUTION

Avoid contacting standoff (fig. 5-5) when installing 2A3 module.

- (a) Place 2A3 module (11) into position.
- (b) Secure with three screws (10).

NOTE

If grommet is missing, install grommet, part no. MS 35489-1S, by cutting and placing over coaxial cable. (See figure 5-5.)

- (c) Insert grommet on coaxial cable of 2A3 module into notch in test set subassembly.
 - (d) Connect four wires to pin connectors on 2A3 module observing color coding as shown in figure 5-5.
 - (e) Replace 2A2 module as in paragraph (5) below.
- (4) *2A1 module.* (See figure 5-3.)

CAUTION

Tighten two screws alternately to avoid damage to connector.

- (a) Attach connector to 2A1 module and secure with two captive screws.

CAUTION

Be sure coaxial cable extends upward (toward bottom of unit) from end of 2A1 module when installed.

- (b) Place 2A1 module (9) into position.
- (c) Replace 2A2 module as in paragraph (5) below.
- (5) 2A2 module. (See figure 5-3.)

CAUTION

Tighten two screws alternately to avoid damage to connector.

- (a) Attach connector to 2A2 module and secure with two captive screws.
- (b) Position 2A2 module (8) as shown in figure 5-4.

CAUTION

Make coaxial connections by hand. Cables and connectors are very delicate. Do not handle more than necessary. Do not use pliers to make connections. Push until detent is reached.

- (c) Connect coaxial cables from 2A1 and 2A3 modules to J3 and J2 as shown in figure 5-4.
- (d) Place 2A2 module (8) into position.
- (e) Install two screws (7) but do not tighten.
- (f) Replace battery retainer as in paragraph (6) below.
- (6) Battery retainer. (See figure 5-3.)
 - (a) Place battery retainer (6) into position.
 - (b) Secure with four screws (5).
 - (c) Tighten two screws (7) if previously removed.
 - (d) Replace battery as in paragraph (7) below.

WARNINGS

A lithium-sulfur dioxide (LiSO₂) battery used to power the test set contains pressurized sulfur dioxide (SO₂) gas. The gas is toxic, and the battery must not be abused in any way that may cause the battery to rupture.

DO NOT heat, short circuit, crush, puncture, mutilate, open, or disassemble batteries.

DO NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the wrap, a swollen plastic wrap, etc.

DO NOT USE any battery which does not easily fit into the battery compartment.

CAUTION

DO NOT dispose of lithium batteries with ordinary trash/refuse. Use proper disposition and disposal procedures (para 3-10).

CAUTION

ONLY use batteries which have been authorized for this equipment.

- (a) Connect battery to battery connector (P3).
- (b) Place battery into position.
- (c) Replace bottom cover assembly as *in* paragraph (8) below.

- (8) Bottom cover assembly. (See figure 5-3.)
 - (a) Place bottom cover assembly (4) into position.
 - (b) Secure with six captive screws (3).
- (9) Top cover assembly. (See figure 5-3.)
 - (a) Place top cover assembly (2) into position.
 - (b) Secure with four screws (1) through top section of hinge.

f. Reassembly (S.N. 635 and Up). These procedures provide instructions for reassembling the test set from various states of partial disassembly as required for removal of defective modules.

or assemblies (para b). Procedures are provided to cover reassembly following removal of the following:

- 2A5 test get subassembly
- Field strength antenna
- 2A1 module
- 2A2 module
- 2A3 module
- 2A4 module
- Battery retainer
- Battery
- Bottom cover assembly
- Top cover assembly

NOTES

If 2A1 module is replaced, forward and reverse power alignment procedures (para 5-14 a,c) shall be completed after reassembly.

If 2A2 module is replaced, spectrum level alignment procedure (para 5-14 d) shall be completed following reassembly.

If 2A3 module is replaced, the spectrum level alignment (para 5-14d) and the forward and reverse power alignment procedures (para 5-14 a,c) shall be completed following reassembly.

(1) *2A5 chassis subassembly.* (See figure 5-3.)

(a) Position 2A1 module (9) and 2A2 module (8). Insert two screws (7) and screw in only a few turns.

(b) Position battery retainer (6) and secure with four screws (5). Tighten screws (7).

(c) position 2A3 module (11) and secure with three screws (10).

(d) Connect four wires to pin connectors on 2A3 module observing color coding as shown in figure 55.

- (e) Connect coaxial cable from 2A1 module (9) to J3 on 2A2 module (8). Connect coaxial cable from 2A3 module (11) to J2 of 2A2 module (8).
- (f) Insert grommet into slot between 2A3 module (11) and 2A2 module (8).
- (g) position 2A4 module (15) and secure with two screws (16).
- (h) Connect orange/black wire from rotary switch to J1 on 2A4 module and white wire to J2 on 2A4 module.

CAUTION

Alternate screwing each screw two or three turns to avoid damage to connectors.

- (i) Connect connectors of wiring harness to 2A1 module (9) and 2A2 module (8).
 - (j) position field strength antenna (14) and secure with one screw.
 - (k) Position top cover assembly (2) and secure with four screws (12).
 - (l) Connect P3 to battery. Position battery in battery retainer (6).
 - (m) Position bottom cover assembly (4) and secure with four captive screws (3).
- (2) *Field strength antenna.* (See figure 5-3.) perform step (j) above.
- (3) *2A1 module.* (See figure 5-3.) Perform steps (a), (b), (e), (f), (i), (l), and (m) above.
- (4) *2A2 module.* (See figure 5-3.)
- (a) Position 2A2 module (8). Insert two screws (7) and screw in only a few turns.
 - (b) Perform steps (b), (e), and (f) above.

CAUTION

Alternate screwing each screw two on three turns to avoid damage to connectors.

- (c) Connect wiring harness connector to 2A2 module (8) .
- (d) Perform steps (l) and (m) above.
- (5) 2A3 module. (See figure 5-3.)
 - (a) Perform steps (l)(c) through (f) above.
 - (b) Perform steps (l)(l) and (m) above.
- (6) 2A4 module. (See figure 5-3.) Perform steps (l)(g), (h), (l), and (m) above.
- (7) Battery retainer. (See figure 5-3.) Perform steps (l)(b), (l), and (m) above.
- (8) Battery. Perform steps (l)(l) and (m).
- (9) Bottom cover assembly. (See figure 5-3.) Perform step (l)(m) above.
- (10) Top cover assembly. (See figure 5-3.) Perform step (l)(k) above.

5-13. PERFORMANCE TESTS. Prior to returning the AN/PRM-34 to Service after maintenance, perform the following performance tests to be sure the radio test set is in operational readiness. If the unit fails forward or reverse power measurement, RF spectrum or frequency tests, perform alignment procedures before troubleshooting.

a. Performance Test Preparation.

(1) Obtain required test equipment listed in the Maintenance Allocation Chart (MAC), appendix B.

(2) Disassemble test set and remove battery by following 5-12(a)(3) for S.N. 1-634 or 5-12(b)(3) for S.N. 635 and up.

WARNING

A lithium organic battery is used in this equipment. It is potentially hazardous if misused or tampered with before, during or after discharge. The following precautions must be strictly observed to prevent possible injury to personnel or equipment damage:

DO NOT heat, incinerate, crush, puncture, disassemble, or otherwise mutilate the battery.

DO NOT short circuit or recharge battery, or bypass internal fuse.

DO NOT store in equipment during periods of nonuse in excess of 30 days.

TURN OFF the equipment immediately if you detect battery compartment becoming unduly hot, hear battery cells venting (hissing sound), or smell irritating sulphur dioxide gas. Remove and dispose of the battery only after it is cool (30-60 minutes) .

(3) Set DC power supply to provide 5.5 volts and connect to battery connector P3 (fig. 5-6) for all performance tests.

b. Built-in Test (BIT) and Under Voltage Test.

(1) Connect test set and support equipment as shown in figure 5-7.

(2) Set MODE switch to OFF CHK.

(3) Push test set PUSH TO TEST switch.

(4) Test set display should read "1.000" or "01..000", which indicates unit is operable.


(5) Any other reading indicates a faulty unit. If test set fails BIT refer to troubleshooting (para 5-7).

(6) Push and hold test set PUSH TO TEST switch.

(7) Slowly reduce DC power supply voltage.

(8) Test set display will change from "1.000" or "01.000" to any other, number at 4.7 ± 0.2 volts, indicating low voltage. If this does not occur refer to troubleshooting (para 5-7).

(9) When the power supply voltage drops below 4.5 volts, the test set display will become blank.

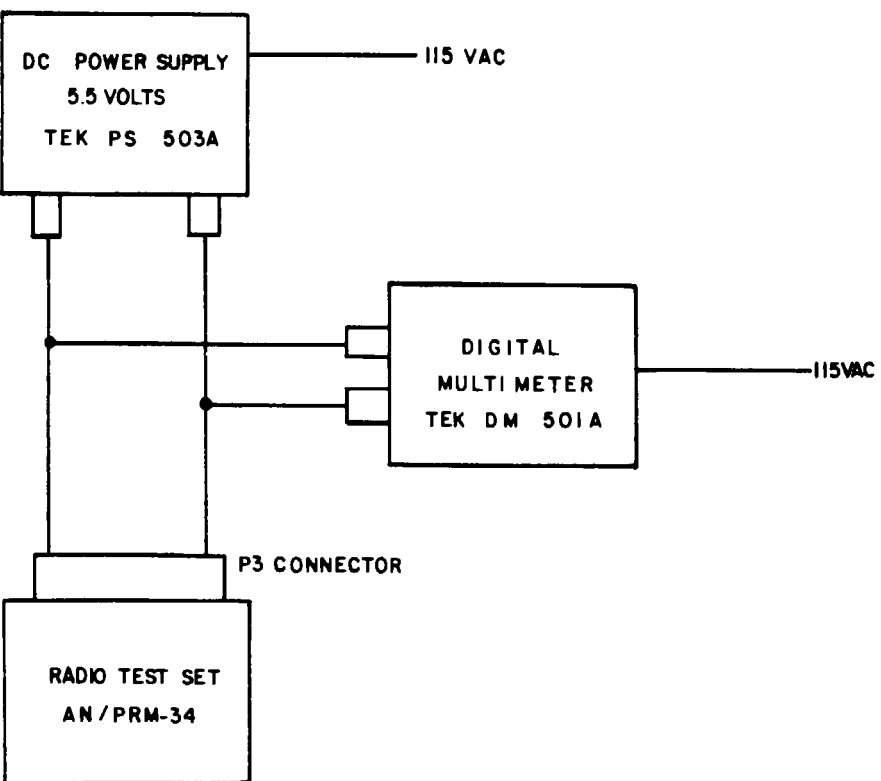

ELBAE-050

Figure 5-7. Built-In Test and Undervoltage Test Setup.

c. Forward Power, Frequency and Reverse Power Tests.

(1) Connect test set and support equipment as shown in figure 5-8.

(2) Set MODE switch to FWD PWR.

(3) Adjust power generator frequency to 55 MHz.

(4) Set power generator to provide power meter indication of 40.0 watts.

(5) Push test set PUSH TO TEST switch.

(6) Test set display must indicate between 32.0 and 48.0 watts with the WATTS LED illuminated.

(7) If the WATTS LED does not illuminate, refer to paragraph 5-7 for troubleshooting. If the display is not within limits, perform forward power alignment procedure (para 5-14a).

(8) Set MODE switch to FREQ.

(9) Push test set PUSH TO TEST switch.

(10) Test set display must indicate between 54.998 and 55.002 MHz with the MHz LED illuminated.

(11) If the MHz LED does not illuminate, refer to paragraph 5-7 for troubleshooting. If the display is not within limits, perform oscillator alignment (para 5-14b) for SN 1 through 634. For units with SN 635 and above, there is no provision for oscillator alignment, therefore troubleshooting must be performed (para 5-7).

(12) Set MODE switch to FWD PWR.

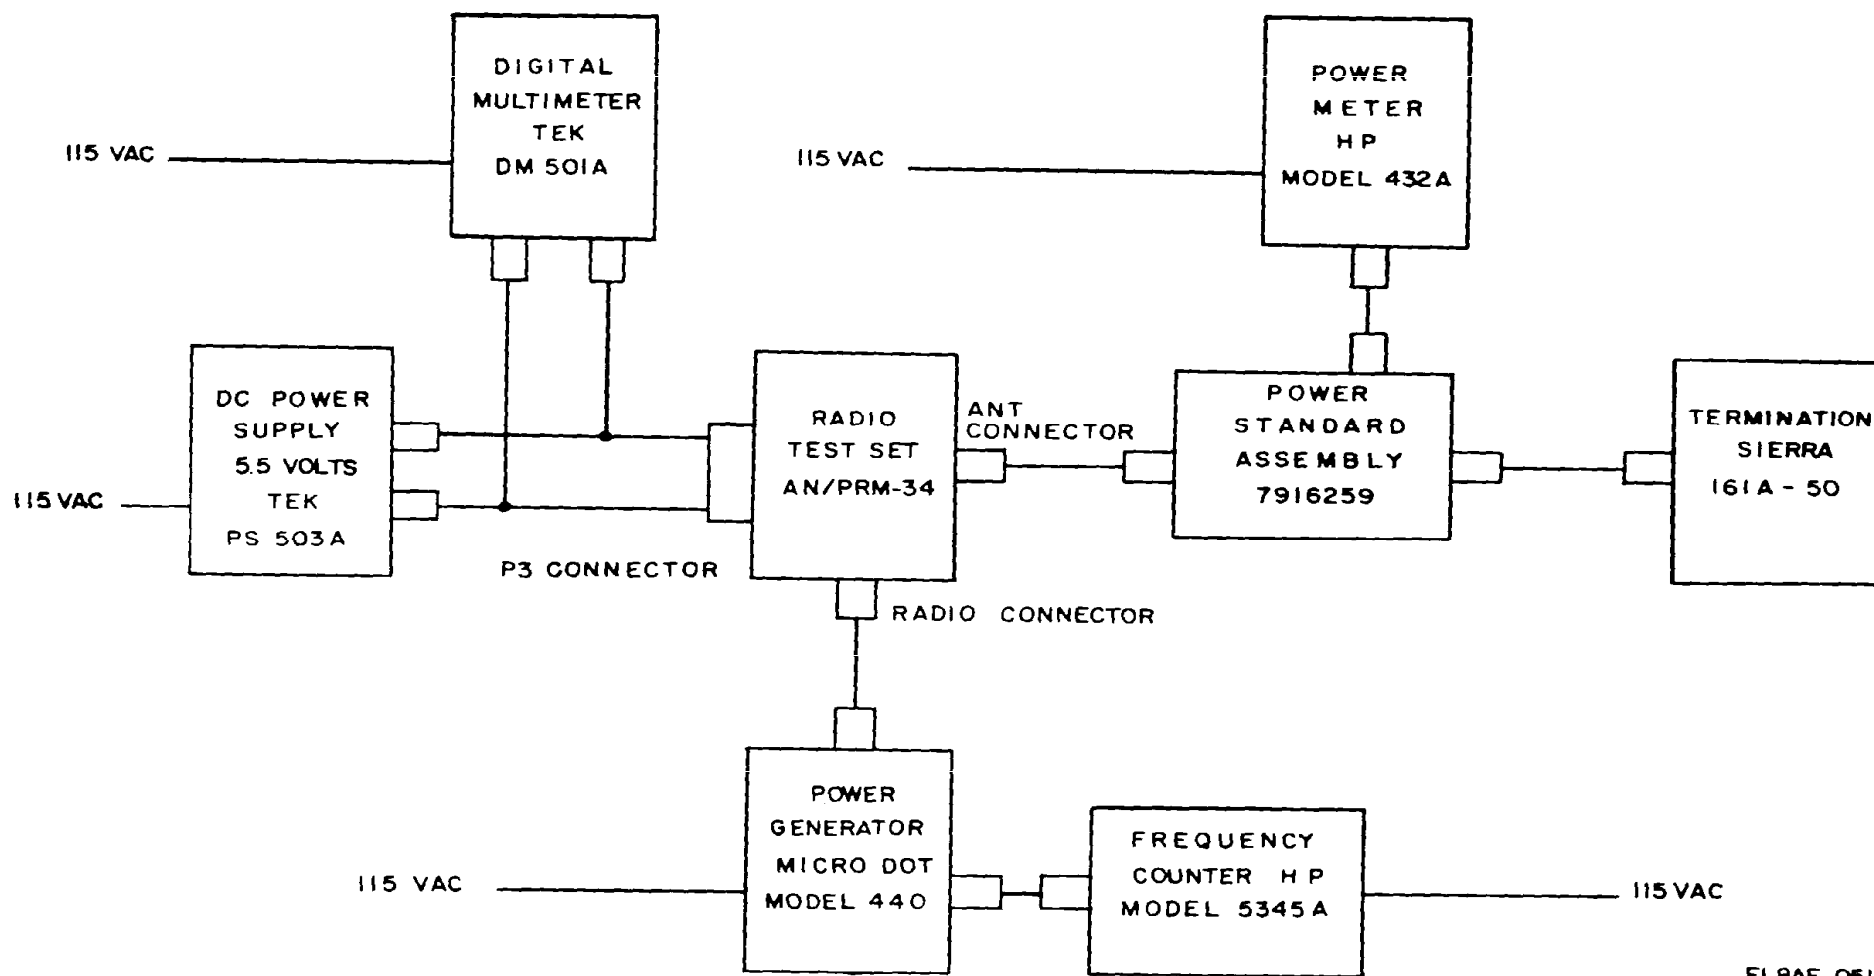


Figure 5-8. Forward Power, Frequency and Reverse Power Tests Setups.

(13) Set power generator to provide power meter indication of:

(a) 3.0 watts for S.N. 1 through 634.

(b) 1.0 watts for S.N. 635 and up.

(14) Push test set PUSH TO TEST switch.

(15) Test set display must indicate between:

(a) 2.4 and 3.6 watts with the WATTS LED illuminated or S.N. 1 through 634.

(b) 0.8 and 1.2 watts with the WATTS LED illuminated or S.N. 635 and up.

(16) If the WATTS LED does not illuminate, refer to paragraph 5-7 for troubleshooting. If the display is not within limits, perform forward power alignment procedure para 5-14 a).

(17) Set MODE switch to FREQ.

(18) Leave power generator set to provide power meter indication as in step (13) above.

(19) Push test set PUSH TO TEST switch.

(20) Test set display must indicate between 54.998 and 55.002 MHz with the MHz LED illuminated.

(21) If the MHz LED does not illuminate, refer to paragraph 5-7 for troubleshooting. If the display is not within limits, perform oscillator alignment (para 5-14&) for S.N. 1 through 634. For units with S.N. 635 and above, there is no provision for oscillator alignment, therefore troubleshooting must be performed (para 5-7).

(22) Reverse connection for ANT and RADIO connectors.

(23) Set MODE switch to RVS PWR.

(24) Set power generator to provide power meter indication of 20.0 watts.

(25) Push test set PUSH TO TEST switch.

(26) Test set display must indicate between 16.0 and 24.0 watts with the WATTS LED illuminated.

(27) If the WATTS LED does not illuminate, refer to paragraph 5-7 for troubleshooting. If the display is not within limits, perform reverse power alignment procedure (para 5-14 c).

(28) Set power generator to provide power meter indication of:

(a) 3.0 watts for S.N. 1 through 634.

(b) 1.0 watts for S.N. 635 and up.

(29) Push test set PUSH TO TEST switch.

(30) Test set display must indicate between:

(a) 2.4 and 3.6 watts with WATTS LED illuminated for S.N. 1 through 634.

(b) 0.8 and 1.2 watts with WATTS LED illuminated for S.N. 635 and up.

(31) If the WATTS LED does not illuminate, refer to paragraph 5-7 for troubleshooting. If the display is not within limits, perform reverse power alignment procedure (para 5-14 c).

(32) Disconnect test set up.

d. RF Spectrum Test.

(1) Connect test set and support equipment as shown in figure 5-9.

(2) Set MODE switch to SENS SQ.

(3) Push test set PUSH TO TEST switch.

(4) Spectrum analyzer must display:

(a) A 30 to 75 MHz spectrum at $-97 \text{ dBm} \pm 3 \text{ dB}$ for S.N. 1 through 634.

(b) A 30 to 80 MHz spectrum at $-98 \text{ dBm} \pm 3 \text{ dB}$ for S.N. 635 and above.

(5) If unit fails RF spectrum test, perform alignment procedures (para 5-14d) prior to troubleshooting (para 5-7).


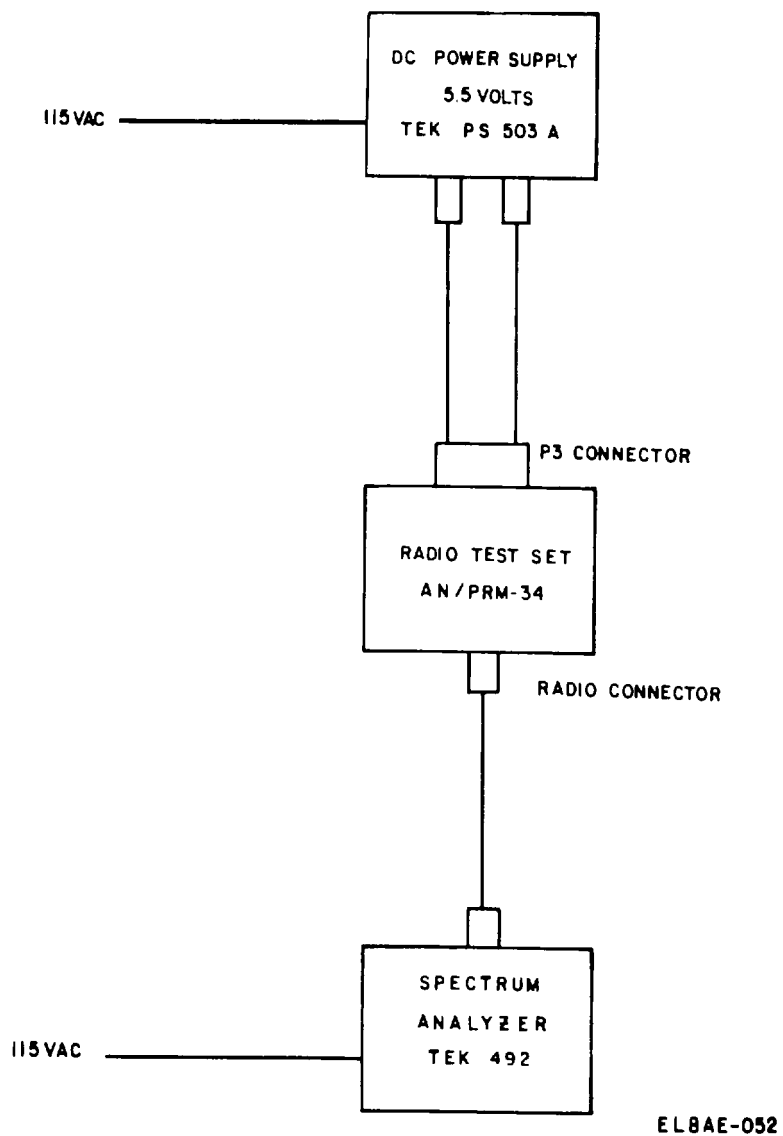


Figure 5-9. RF Spectrum Test Setup.
5-38 Change 1

e. Field Strength Test.

- (1) Connect test set and support equipment as shown in figure 5-10.
- (2) Set test set MODE switch to FLD STR.
- (3) Release top of antenna.
- (4) Set signal generator to 50 MHz at +4 dBm.
- (5) Connect shielded alligator clip of cable (fig. F-1) to case of test set, or outer portion of RADIO or ANT connector.
- (6) Connect center cable alligator clip to antenna immediately above the coiled spring.
- (7) Push test set PUSH TO TEST switch.
- (8) Test set display must indicate between "O" and "100" with the FLD STR LED illuminated. The display should remain on for approximately 45 seconds.
- (9) If these conditions are not met, refer to paragraph 5-7 for troubleshooting.

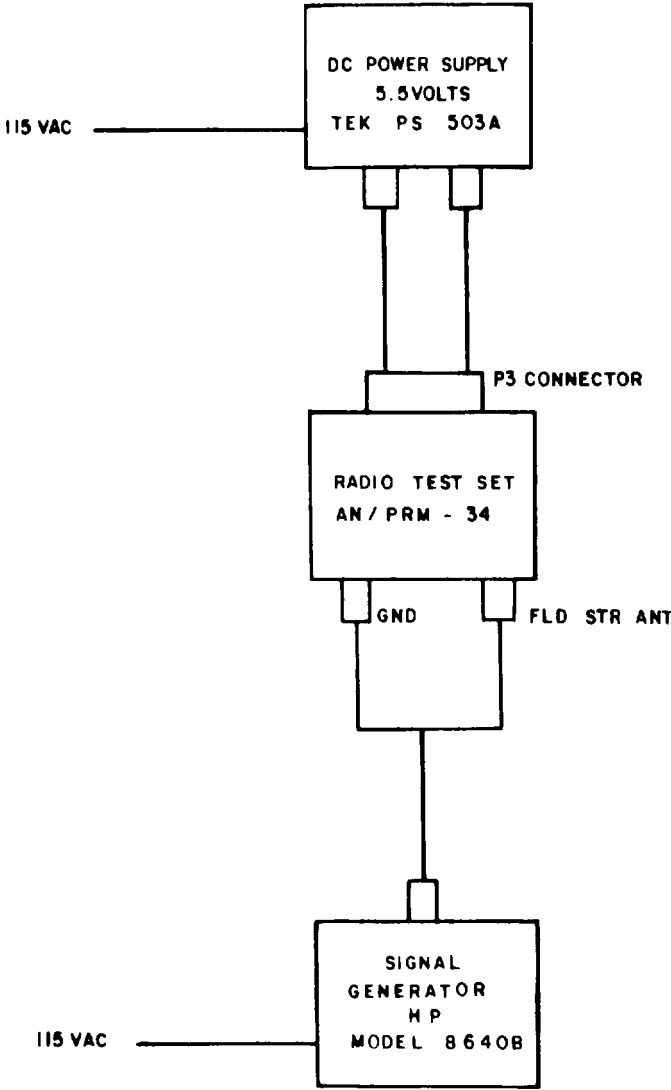

EL8AE-053

Figure 5-10. Field Strength Test Setup.

5-14. TEST SET ALIGNMENT PROCEDURES.

a. Forward Power Alignment Procedure.

(1) Leave test set and support equipment connected as in figure 5-8, with controls set as in the forward power test.

(2) Place test set on end to allow adjusting of potentiometers (fig. 5-11).

(3) Set power generator to provide power meter indication of 40.0 watts.

(4) Push test set PUSH TO TEST switch and adjust R9 for a display reading of 40.0 watts.

(5) Set power generator to provide power meter indication of:

(a) 3.0 watts for S.N. 1 through 634.

(b) 1.0 watt for S.N. 635 and up.

(6) Push test set PUSH TO TEST switch and adjust:

(a) R9 for a display reading of 3.0 watts for S.N. 1 through 634.

(b) R7 for a display reading of 1.0 watt for S.N. 635 and up.

(7) If the test set cannot be aligned, refer to paragraph 5-7 for troubleshooting.

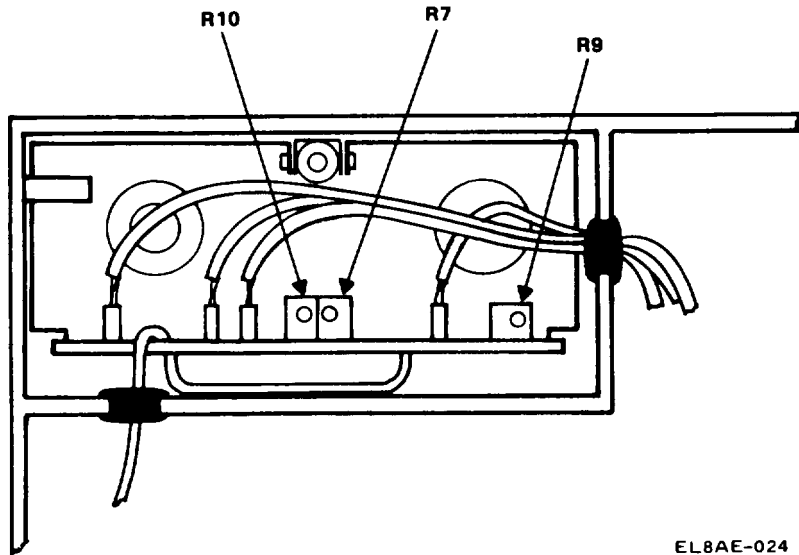


Figure 5-11. Potentiometer Locations, Power Detector Module (2A3).

b. Oscillator Alignment Procedure.

NOTE

For test sets with S.N. 635 and above, there is no provision for oscillator alignment, therefore troubleshooting must be performed (para 5-7).

(1) Leave test set and support equipment connected as in figure 5-8, with MODE switch set to FREQ, but disconnect 5.5 Vdc power supply from connector P3.

(2) Ensure power generator is set to a frequency of 55 MHz, then disconnect frequency counter.

(3) Remove battery retainer (para 5-12 a (4)).

(4) Remove two screws attaching 2A1 and 2A2 modules.

(5) Without disconnecting any connections, carefully lift 2A1 and 2A2 modules from test set.

(6) Place an insulating material between 2A1 module, 2A2 module and test set chassis to avoid damage due to any short circuits when power is applied.

NOTE

R41 raises and lowers the overall level while C29 primarily raises and lowers the level of the higher frequencies.

- (d) Push and hold test set PUSH TO TEST switch. A 5 MHz spectrum will appear on the A2 to bring the levels of all the spectrum outputs between -55 and -61 dBm on the analyzer display over a frequency range of 30 to 80 MHz.

5-13. FINAL PERFORMANCE CHECK. Following any maintenance and before returning the AN/PRM-34 to service, perform the following procedures in the order presented below to be sure test set is in operational readiness. If unit fails any part of final performance check, refer to troubleshooting (section IV). If unit fails RF spectrum or power measurement, perform alignment procedures before troubleshooting.

a. *Performance Test Preparation.*

NOTE

Refer to Maintenance Allocation Chart (MAC) (appendix B) for details regarding required test equipment.

- (1) Obtain test equipment listed *in MAC*.

NOTE

DC power supply connections and *setting* will be used for all test of performance check.

- (2) Set DC power supply to provide $5.5 \pm 0.5V$.

WARNINGS

A lithium-sulfur dioxide (LiSO₂) battery used to power the test set contains pressurized sulfur dioxide (SO₂) gas. The gas is toxic, and the battery must not be abused in any way that may cause the battery to rupture.

DO NOT heat, short circuit, crush, puncture, mutilate, open, or disassemble batteries.

DO NOT USE any battery which shows signs of damage, such as bulging, swelling, disfigurement, brown liquid in the wrap, a swollen plastic wrap, etc.

DO NOT USE any battery which does not easily fit into the battery compartment.

CAUTION

DO NOT dispose of lithium batteries with ordinary trash/refuse. Use proper deposition and disposal procedures (para 3-10).

CAUTION

ONLY use batteries which has been authorized for this equipment.

- (3) Remove bottom cover and battery (if installed).
- (4) Connect DC power supply to battery connector (P3).
- (5) Connect 8000 uF 50V capacitor across Dc power supply leads as close to test set as possible.

b. BIT. Perform BIT (para 2-3c).

c. RF Spectrum Teat.

- (1) Connect input of 20 dB/40 dB amplifier (set to 40 dB) to RADIO connector. (See figure 5-9.)

- (2) Connect amplifier output to spectrum analyzer input.
- (3) Set spectrum analyzer LOG REF LEVEL and INPUT ATTENUATION controls to zero.
- (4) Set MODE switch to top SENS SQ.
- (5) Push test set PUSH TO TEST switch.
- (6) (S.N. 1 through 634) Spectrum analyzer should display a 30 to 75 MHz spectrum at -57 dBm \pm 3 dB.

(S.N. 635 and Up) Spectrum analyzer should display a 30 to 75 MHz spectrum at -57 dBm 13 dB.
- (7) Disconnect test equipment.

d. Tone Modulation Test.

- (1) Connect radio interference measuring set input to RADIO connector. (See figure 5-11.)

c. Reverse Power Alignment Procedure.

(1) Leave test set and support equipment connected as in figure 5-8, with controls set as in the reverse power test, but reverse connections for ANT and RADIO connectors.

(2) Place test set on end to allow adjusting of potentiometers (fig. 5-11).

(3) Set power generator to provide power meter indication of 20.0 watts.

(4) Push test set PUSH TO TEST switch and adjust R10 for a display reading of 20.0 watts.

(5) Set power generator to provide power meter indication of:

(a) 3.0 watts for S.N. 1 through 634.

(b) 1.0 watt for S.N. 635 and up.

(6) Push test set PUSH TO TEST switch and adjust R10 for a display reading of:

(a) 3.0 watts for S.N. 1 through 634.

(b) 1.0 watt for S.N. 635 and up.

(7) If the test set cannot be aligned, refer to paragraph 5-7 for troubleshooting.

d. RF Spectrum Level Alignment Procedure.

(1) Leave test set and support equipment connected as in figure 5-9, with MODE switch set to SENS SQ, but disconnect 5.5 Vdc power supply from connector P3.

(2) Partially disassemble test set by following paragraph 5-12 a (5), steps (a), (c), (d) and (e) for test sets with S.N. 1 through 99. For test sets with S.N. 100 and above, all alignment adjustments can be performed without removing 2A2 module.

(3) Locate C29 and R41 on 2A2 module. See figure 5-4 for S.N. 1 through 99 and figure 5-6 for S.N. 100 and above.

(4) Reconnect 5.5 Vdc power supply to connector P3.

(5) Push and hold test set PUSH TO TEST switch. Set spectrum analyzer to display a 50 MHz spectrum output with a center frequency of 55 MHz to allow viewing of all spectrum outputs between:

(a) 30 MHz and 75 MHz for S.N. 1 through 634.

(b) 30 MHz and 80 MHz for S.N. 635 and above.

(6) Using a small alignment tool, adjust C29 and R41 so that all displayed spectrum outputs are between:

(a) -94 and -100 dBm for S.N. 1 through 634.

(b) -95 and -101 dBm for S.N. 635 and above.

R41 adjusts the spectrum level outputs of all frequencies, and C29 adjusts primarily the higher frequencies.

(7) Release test set PUSH TO TEST switch.

(8) If the test set cannot be aligned to meet the requirements of this procedure, refer to troubleshooting (para 5-7).

APPENDIX A

REFERENCES

- DA Pam 25-30 Consolidated Index of Army Publication and Blank Forms.
- DA Pam 738-750 The Army Maintenance *Management System* (TAMS).
- SC 5180-91-CL-R13 Tool Kit, Electronic Equipment TK-101/G (NSN 5180-00-064-5178).
- TB 43-180 Calibration Requirements for the Maintenance of Army Materiel.
- TM 11-5820-396-12 Operator's and Organizational Maintenance Manual (Including Repair Parts and Special Tool Lists): Radio Set, AN/PRC-25 (NSN 5820-00-857-0759) (Including Receiver-Transmitter, Radio, RT-505/PRC-25 (5820-00-857-0934)
- TM 11-5820-401-10-1 Operator's Manual: Radio Sets AN/VRC-12 (NSN 5820-00-223-7412), AN/VRC-43 (5820-00-223-7415), AN/VRC-44 (5820-00-223-7417), AN/VRC-45 (5820-00-223-7418), AN/VRC-46 (5820-00-223-7433), AN/VRC-47 (5820-00-223-7434), AN/VRC-49 (5820-00-223-7437) (Used with an Intercom System).
- TM 11-5820-401-10-2 Operator's Manual: Radio Sets AN/VRC-12 (NSN 5820-00-223-7412), AN/VRC-43 (5820-00-223-7415), AN/VRC-44 (5820-00-223-7417), AN/VRC-45 (5820-00-223-7418), AN/VRC-46 (5820-00-223-7433), AN/VRC-47 (5820-00-223-7434) AN/VRC-48 (5820-00-223-7435) AND AN/VRC-49 (5820-00-223-7437) (Used with an Intercom System).
- TM 11-5820-401-12 Operator's and Organizational Maintenance Manual: AN/VRC-12 (5820-00-223-7412), AN/VRC-43 (5820-00-223-7415), AN/VRC-44 (5820-00-223-7417), AN/VRC-45 (5820-00-223-7418), AN/VRC-46 (5820-00-223-7433), AN/VRC-47 (5820-00-223-7434), AN/VRC-48 (5820-00-223-7435), AN/VRC-49 (5820-00-

TM 11-6625-3015-14

223-7437), AN/VRC-54 (5820-00-223-7567), AN/VRC-55 (5820-00-402-2265); Mounting MT-1029/VRC (5820-00-893-1323) and Mounting MT-1898/VRC (5820-00-897-1324); Antenna AT-912/VRC (5820-00-897-6357); Control, Frequency Selector C-2742/vRc (5820-00-892-3343, , and Control, Radio Set C-2299/VRC (5820-00-892-3340).

- TM 11-5820-498-12 Operator's and Organizational Maintenance Manual: Radio Sets, AN/VRC-53 (NSN 5820-00-223-7467), AN/VRC-64 (5820-00-223-7475), AN/GRC-125 (5820-00-223-7411) and AN/GRC-160 (5820-00-223-7473) and Amplifier Power Supply Groups OA-3633/GRC and OA-3633A/GRC (5820-00-973-3383).
- TM 11-5820-667-12 Operator's and Organizational Maintenance Manual: Radio Set AN/PRC-77 (NSN 5820-00-930-3724) (Including Receiver-Transmitter, Radio RT-841/PRC-77 (5820-00-930-3725).
- TM 11-6625-2718-14&P Operator's, Organizational, Director Support, and General Support Maintenance Manual, Including Repair Parts and Special Tools List for Test Set, Radio Frequency, Power AN/URM-182 (NSN 6625-01-149-9371).
- TM 11-6625-2718-14-1 Operator's Organizational, Director Support, and General Support Maintenance Manual: Test Set, Radio Frequency, Power AN/URM-182A (NSN 6625-01-062-3599).
- TM 11-6625-3015-24P Repair Parts and Special Tools List, Radio Test Set AN/PRM-34 (NSN 6625-01-094-5646).
- TM 750-244-2 Procedures for Destruction of Electronics Materiel to Prevent Enemy Use (Electronics Command).

- TM 11-6625-3015-24P Repair Parts and Special Tools List,
Radio Test Set AN/PRM-34 (To be
published).
- TM 38-750 The Army Maintenance Management System
(TAMMS).
- TM 750-244-2 Procedures for Destruction of Electronics
Materiel to Prevent Enemy Use
(Electronics Command).

APPENDIX B

MAINTENANCE ALLOCATION CHART

Section I. INTRODUCTION

B-1 . GENERAL.

a. This section provides a general explanation of all maintenance and repair functions authorized at various maintenance categories.

b. The Maintenance Allocation Chart (MAC) in Section 11 designates overall responsibility for the performance of maintenance functions on the identified end item or component. The implementation of the maintenance functions upon the end item or component will be consistent with the assigned maintenance functions.

c. Section III lists the special tools and test equipment required for each maintenance function as referenced from Section II.

d. Section IV contains supplemental instructions and explanatory notes for a particular maintenance function.

B-2 . MAINTENANCE FUNCTIONS. Except for ammunition MAC, maintenance functions will be limited to and defined as follows:

a. *Inspect.* To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination.

b. *Test.* To verify serviceability by measuring the mechanical or electrical characteristics of an item and comparing those characteristics with prescribed standards.

c. *Service.* Operations required periodically to keep an item in proper operating condition, i.e., to clean (includes decontaminate, when required), to preserve, to drain, to paint, or to replenish fuel, lubricants, chemical fluids, or gases.

d. Adjust. To maintain, within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to specified parameters.

e. Aline. To adjust specified variable elements of an item to bring about optimum or desired performance.

f. Calibrate. To determine and cause corrections to be made or to be adjusted on instruments or test, measuring, and diagnostic equipments used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.

g. Install. The act of emplacing, seating, or fixing into position an item, part, or module (component or assembly) in a manner to allow the proper functioning of an equipment or system.

h. Replace. The act of substituting a serviceable like type part, subassembly, or module (component or assembly) for an unserviceable counterpart.

i. Repair. The application of maintenance services¹ or other maintenance actions² to restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

j. Overhaul. That maintenance effort (service/action) necessary to restore an item to a completely serviceable/operational condition as prescribed by maintenance standards in appropriate technical publications (i.e., DMWR). Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.

¹Services - inspect, test, service, adjust, aline, calibrate, or replace.

²Actions - welding, grinding, riveting, straightening, facing, remachining, or resurfacing.

k. *Rebuild.* Consists of those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours/miles, etc.) considered in classifying Army equipments/components.

B-3 . EXPLANATION OF COLUMNS IN THE MAC, SECTION II.

a. *Column 1, Group Number.* Column 1 lists functional group code numbers, the purpose of which is to identify components, assemblies, subassemblies, and modules with the next higher assembly.

b. *Column 2, Component/Assembly.* Column 2 contains the names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

c. *Column 3, Maintenance Function,* Column 3 lists the functions to be performed on the item listed in Column 2. (For detailed explanation of these functions, see paragraph B-2.)

d. *Column. 4, Maintenance Category.* Column 4 specifies, by the listing of a work time figure in the appropriate subcolumn(s), the category of maintenance authorized to perform the function listed in Column 3. This figure represents the active time required to perform that maintenance function at the indicated category of maintenance. If the number of complexity of the tasks within the listed maintenance function vary at different maintenance categories, appropriate work time figures will be shown for each category. The work time figure represents the average time required to restore an item (assembly, subassembly, component, module, end item, or system) to a serviceable condition under typical field operating conditions. This time includes preparation time, troubleshooting time, and quality assurance/quality control time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the maintenance allocation chart. The symbol designations for the various maintenance categories are as follows:

- C.Operator or crew
- O.Organizational maintenance
- F.Direct support maintenance
- HGeneral support maintenance
- D.Depot maintenance

e. Column 5, Tools and Equipment. Column 5 specifies, by code, those common tool sets (not individual tools) and special tools, TMDE, and support equipment required to perform the designated function.

f. Column 6, Remarks. This column shall, when applicable, contain a letter code, in alphabetic order, which shall be keyed to the remarks contained in Section IV.

B-4 . EXPLANATION OF COLUMNS IN TOOL AND TEST EQUIPMENT REQUIREMENTS, SECTION III.

a. Column 1, Reference Code. The tool and test equipment reference code correlates with a code used in the MAC, Section II, Column 5.

b. Column 2, Maintenance Category. The lowest category of maintenance authorized to use the tool or test equipment.

c. Column 3, Nomenclature. Name or identification of the tool or test equipment.

d. Column 4, National Stock Number. The National stock number of the tool or test equipment.

e. Column 5, Tool Number. The manufacturer's part number.

B-5 . EXPLANATION OF COLUMNS IN REMARKS, SECTION IV.

a. Column 1, Reference Code. The code recorded in column 6, Section II.

b. Column 2, Remarks. This column lists information pertinent to the maintenance function being performed as indicated in the MAC, Section II.

SECTION II. MAINTENANCE ALLOCATION CHART
FOR
RADIO TEST SET AN/PRM-34

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIPMENT	(6) REMARKS
			C	Q	F	H	D		
00	RADIO TEST SET AN/PRM-34	INSPECT		0.01					A
		REPAIR		0.01					B
01	TEST SET, RADIO TS-3951/PRM-34	INSPECT		0.01					
		SERVICE		0.03				10	
		TEST		0.01					C
		TEST				0.75		1-10	
		REPAIR		0.13				10	D,E
		REPAIR				0.47		10	F,G,H
	ALIGN				0.17				
	CALIBRATE				2.0		1-8, 10		I

TM 11-6625-3015-14

Change 1 B-5

SECTION III. TOOL AND TEST EQUIPMENT REQUIREMENTS
 FOR
 AN/PRM-34

TOOL OR TEST EQUIPMENT REF CODE	MAINTENANCE CATEGORY	NDMENCLATURE	NATIONAL/ NATO STOCK NUMBER	TOOL NUMBER
1	H	DC POWER SUPPLY	6695-01-076-8966	TEK PS503A
2	H	DIGITAL MULTIMETER	6625-01-075-8583	TEK DM501A
3	H	TERMINATION	4931-01-030-1454	SIERRA 161A-50
4	H	POWER GENERATOR	4931-01-128-1443	MICRO DOT 440
5	H	POWER METER	6625-00-148-8069	HP 432A
6	H	POWER STANDARD ASSEMBLY	6695-01-088-2146	7916259
7	H	FREQUENCY COUNTER	4931-01-040-0121	HP 5354A
8	H	SPECTRUM ANALYZER		TEK 492
9	H	SIGNAL GENERATOR	4931-01-085-4229	HP 8640B
10	O,H	TOOL KIT	4931-01-073-3845	JTK171 LAL

SECTION IV. REMARKS

REFERENCE CODE	REMARKS
A	INSPECTION TO INCLUDE INSIDE GASKET ON TRANSIT CASE FOR POSSIBLE LEAKS.
B	REPAIR BY REPLACEMENT OF TRANSIT CASE, TEST SET RADIO, COAX CABLE OR BNC ADAPTER.
c	TEST USING BUILT-IN-TEST PROCEDURE.
D	REPAIR BY TIGHTENING OF KNOB,REPLACEMENT OF BATTERY.
E	DISPOSE OF REPLACED LITHIUM-SULFER DIOXIDE BATTERIES BY TURNING INTO LOCAL PROPERTY DISPOSAL OFFICER.
F	REPAIR TEST SET BY REPLACEMENT OF NEXT LOWER INDENTURED ASSEMBLIES.
G	FOR TEST SETS #1-634, IF THE SPECTRUM GENERATOR BOARD (2A2) AND/OR THE TEST SET SUBASSEMBLY (2A4) ARE FAULTY DO NOT ATTEMPT TO REPAIR THE TEST SET. THE TEST SET SHOULD BE RETURNED TO THE USER WHO, IN TURN, WILL RETURN THE UNIT THROUGH NORMAL SUPPLY CHANNELS FOR DISPOSAL AND REQUISITION A NEW SET.
H	BEFORE DISPOSING OF AN INDICATED BAD MODULE, PERFORM THE FOLLOWING TEST: PLACE THE SUSPECTED FAULTY MODULE INTO A KNOWN GOOD TEST SET AND ENSURE THAT THE SET MALFUNCTIONS AS EXPECTED.
I	CALIBRATE UNIT IN ACCORDANCE WITH TB 9-6625-2051-35 ENTITLED "CALIBRATION PROCEDURE FOR RADIO TESTSET AN/PRM-34".

APPENDIX C

COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS

Section I. INTRODUCTION

C-1. SCOPE. This appendix lists components of end item and basic issue items for the AN/PRM-34 to help you inventory items required for safe and efficient operation.

C-2 GENERAL. The Components of End Item and Basic Issue Items Lists are divided into the following sections:

a. *Section II, Components of End Item.* This listing is for informational purposes only, and is not authority to requisition replacements. These items are part of the end item, but are removed and separately packaged for transportation or shipment. As part of the end item, these items must be with the end item whenever it is issued or transferred between property accounts. Illustrations are furnished to assist you in identifying the items.

b. *Section III, Basic Issue Items.* This section is not applicable to the AN/PRM-34.

C-3. EXPLANATION OF COLUMNS. The following provides an explanation of columns found in the tabular listings:

a. *CoLUMN (1) - Illustration Number (ILLUS Number).* This column indicates the number of the illustration in which the item is shown.

b. *Column (2) - National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

c. *Column (3) - Description.* Indicates the Federal item name and, if required, a minimum description to identify and locate the item. The last line for each item indicates the FSCM (in parentheses) followed by the part number. If item needed


differs for different models of this equipment, the model is shown under the "Usable On" heading in this column. These codes are identified as:

<u>Code</u>	<u>Used On</u>
A	S.N. 1 thru 634
B	S.N. 635 and up

d. Column (4) - Unit of Measure (U/M). Indicates the measure used in performing the actual operational/maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr).

e. column (5) - Quantity required (Qty rqr). Indicates the quantity of the item authorized to be used with/on the equipment.

Section II. COMPONENTS OF END ITEM

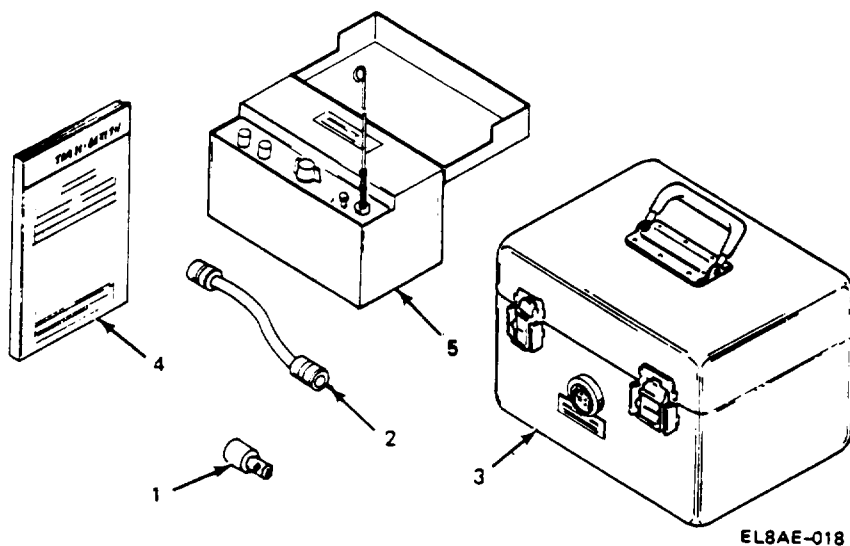

(1) Illus Number	(2) National Stock Number	(3) Description FSCM and Part Number	(4) Usable On Code	(5) Qty req
1	5985-01-097-7337	Adapter, Antenna	B Ea	1
2		Cable, Test (05276) 2248-C--24	A Ea	1
2	5995-00-405--9097	Cable, Test (80045)	B Ea	1
3		Case, Transit (80045) 384858	A Ea	1
3		Case, Transit (80045) 393662-1	B Ea	1
		Manual, Technical TM 11-6625-3015-14	Ea	1
5		Test Set, Radio (80045) TS-3951/ PRM-34	Ea	1

Change 4

C-3/(C-4 blank)

APPENDIX D
ADDITIONAL AUTHORIZATION LIST
Section I. INTRODUCTION

D-1. Scope.

This appendix lists additional items you are authorized for the support of the Radio Test Set AN/PRM-34 .

D-2. General,

This list identifies items that do not have to accompany the Radio Test Set AN/PRM-34 and that do not have to be turned in with it. These items are all authorized to you by CTA, MTOE, TDA, or JTA.

D-3. Explanation of Listing,

National stock numbers, descriptions, and quantities are provided to help you identify and request the additional items you require to support this equipment. The items are listed in alphabetical sequence by item name under the type document (ie, CTA, MTOE, TDA, or JTA) which authorizes the item(s) to you.

Section II. ADDITIONAL AUTHORIZATION LIST

(1) National Stock Number	(2) Description FSCM & Part Number	(3) Usable on Cod. U/M	(4) Qty Auth
6135-01-090-5364	Battery, Lithium (80058) BA-5847/U	EA	1

APPENDIX E

EXPENDABLE SUPPLIES AND MATERIALS LIST

Section I. INTRODUCTION

E-1 . SCOPE . This appendix lists expendable supplies and materials you will need to operate and maintain the AN/PRM-34. These items are authorized to you by CTA 50-970, Expendable Items (Except Medical, Class V, Repair Parts, and Heraldic Items).

E-2 . EXPLANATION OF COLUMNS.

a. Column 1 - Item Number. This number is assigned to the entry in the listing and is referenced in the narrative instructions to identify the material (e.g., "Use cleaning compound, item 5, App. D").

b. Column 2 - Level. This column identifies the *lowest level* of maintenance that requires the listed item.

C - Operator/Crew
O - organizational Maintenance
F - Direct Support Maintenance
H - General Support Maintenance

c. Column 3 - National stock Number. This is the national stock number assigned to the item: use it to request or requisition the item.

d. Column 4 - Description. Indicates the federal item name and, if required, a description to identify the item. The last line for each item indicates the part number followed by the Federal Supply Code for Manufacturer (FSCM) in parentheses, if applicable.

e. column 5 - Unit Of Measure (U/M). Indicates the measure used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr). If the unit of measure differs from the unit of issue, requisition the lowest unit of issue that will satisfy your requirements.


Section II. SUPPLIES AND MATERIALS LIST


(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION	(5) U/M
1	H		Paint, MIL-C-22750 class I type II epoxy-polyamide coating, color 24087 (semigloss olive drab)	AR

APPENDIX F

ILLUSTRATED LIST OF MANUFACTURED ITEMS

F-1. INTRODUCTION. This appendix includes complete instructions for making items authorized to be manufactured or to be fabricated at direct support level maintenance.

F-2. LIST OF MANUFACTURED ITEMS. Details of the cable required for the field strength test (para 5-13 e) are given in figure F-1. 

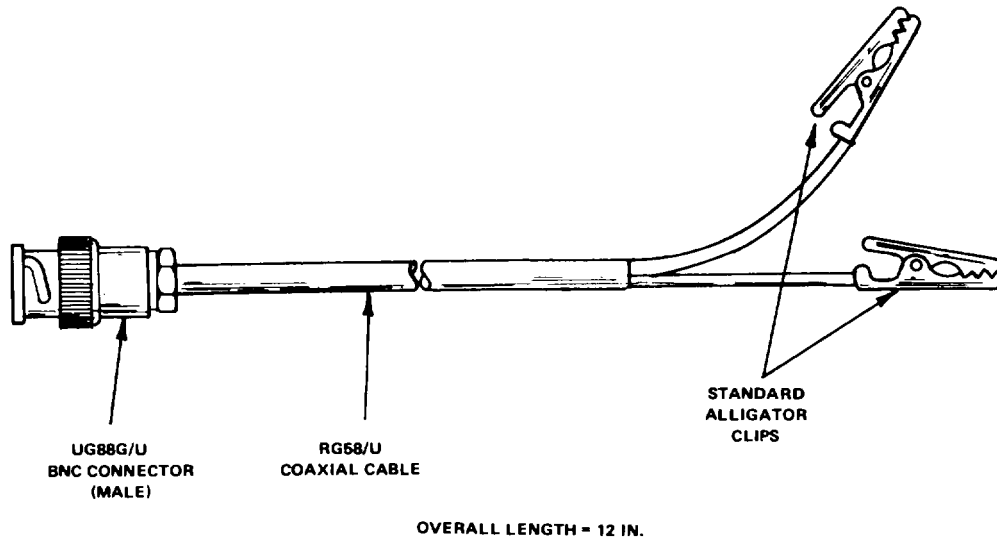

NOTE

THIS CABLE IS REQUIRED TO APPLY OUTPUT
OF VARIABLE ATTENUATOR DIRECTLY TO
AN/PRM34 FIELD STRENGTH ANTENNA (FLD
STR ANT) DURING FIELD STRENGTH TEST.

EL8AE025

Figure F-1. Field Strength Test Cable.

INDEX

Subject	Paragraph, Figure, Table, Number
A	
Additional Authorization List	Appendix D ■
Alignment Procedures	5-14
AN/PRM-34, Radio Test Set	F 1-1
Antenna, Random Length	<u>2-7b</u>
Assembly and Preparation for Use	2-2
Assembly of Unpacked Equipment	2-2 <u>b</u>
B	
Battery Installation	2-2b(3)
Battery Removal	5-12a(3)
Battery Replacement	3-8
Battery Retainer Removal	5-12 <u>a</u> (4)
BIT	5-13 <u>b</u>
Block Diagram, Test Set	F 1-3
Built-in-Test	2-3 <u>c</u> ,5-13 <u>b</u>
Built-in-Test Procedures	F 2-3
Built-in-Test Setup	F 5-7
Bottom Cover Assembly Removal	5-12 <u>a</u> (2)
C	
Cable, Field Strength Test	5-4
Cable, Field Strength Test	F F-1
Calibration	1-4
Capabilities, Equipment	1-10
Characteristics, Equipment	1-10
Checking Unpacked Equipment	2-2 <u>a</u> (2)
Cleaning	5-12 <u>c</u> ,3-7
Common Tools and Equipment	3-1
Components, Major,- Location of	F 1-2
Components of End Item	Appendix C
Connections to A3 Module	F 5-6
Connectors	F 2-1
Controls	F 2-1
Controls, Use and Description of	T 2-1
Cross-Reference List, Nomenclature	T 1-2

Subject	Paragraph, Figure, Table, Number
D	
Data, Equipment	1-12
Description and Location of Major Components	1-11
Description and Use of, Controls	T 2-1
Description, Functional	5-6,1-13
Description of Operator Controls and Indicators	2-1
Designations, Official	1-8
Destruction of Materiel	1-6
Direct Support Maintenance	4-1
Disassembly (S.N. 1 thru 634)	5-12a
Disassembly (S.N. 635 and Up)	5-12 b
Duties, Maintenance	5-2
E	
Emergency Conditions, Operation Under	2-7
Equipment and Tools	5-3,3-1
Equipment Characteristics, Capabilities, and Features	1-10
Equipment Data	1-12
Equipment Improvement Recommendations, Reporting	1-9
Equipment to be Calibrated	T 1-1
Expendable Supplies and Materials List	Appendix E
Exploded View, Radio Test Set TS-3951/PRM-34	F 5-3
F	
Features, Equipment	1-10
Field Strength Test	2-3 g, 5-13 e
Field Strength Test Setup	F 5-10
Forms, Maintenance	1-3
Forward and Reverse Power Test	2-3e
Forward Power Alignment Procedure	5-14 a
Forward Power Test Setup	F 5-8
Frequency Test	2-3 f, 5-13 e
Frequency Test Setup	F 5-13
Functional Description	1-13,5-6
G	
General Support Maintenance	5-2
General Support Troubleshooting	5-7

PIN: 054270-002

Subject	Paragraph, Figure, Table, Number
H	
Hand Receipt Manuals	1-5
I	
Illustrated List of Manufactured Items	Appendix F
Improvement Recommendations, Equipment, Reporting	1-9
Index, Symptom	5-10
Indicators and Operator Controls, Description of.	2-1
Indicators, Connectors, and Controls	F 2-1
Inspection	5-12d
Instruction Plates	2-6,F 2-8 F 2-9
Interconnection Diagram, Field Strength Test, Test Set and AN/PRC-68...	F 2-7
Interconnection Diagram, Test Set and AN/PRC-68..	F 2-6
Interconnection Diagram, Test Set and AN/VRC-12..	F 2-4
Interconnection Diagram, Test Set and AN/VRC-77..	F 2-5
Interconnection Schematic Diagram	F 5-1
L	
List of Manufactured Items	Appendix F
Location and Description of Major Components.	1-11,F 1-2
Logic Tree	5-11,F 5-2
Logic Tree, Troubleshooting	F 5-2
Low Battery Voltage, Operation With	2-7 a
M	
Maintenance Allocation Chart	Appendix B
Maintenance Concept	5-12
Maintenance Duties	5-2
Maintenance Forms, Records, and Reports	1-3
Maintenance Instructions, Direct support	4-1
Maintenance Instructions, General Support	5-2
Major Components Location and Description	1-11
Major Components Location	F 1-2
Manuals, Hand Receipt	1-5
Manufactured Items Illustrated List	Appendix F
Materiel Destruction	1-6
Movement Preparation	2-5

Subject

N

Names, Official	1-8
Nomenclature Cross-Reference List	T 1-2
Nomenclature, Official	1-8

0

Official Nomenclature Names and Designations	1-8
Operating Procedures	2-3
Operation in Unusual Weather	2-8
Operation Under Emergency Conditions	2-7
Operation With Low Battery Voltage	2-7 <u>a</u>
Operation With Random Length Antenna	2-7 <u>b</u>
Operator Controls and Indicators	2-1
Organizational Level Troubleshooting	3-5
■ Oscillator Alignment Procedure	5-14 <u>b</u>

P

Parts, Repair	3-3, 5-5
■ Performance Tests	5-13
Performance Test Preparation	5-13 <u>a</u>
Plates, Instruction	2-6
PMCS	3-4, T 3-1
Potentiometer Locations.	F 5-8
Preparation for Movement.	2-5
Preparation for Storage and Shipment	1-7
Preventive Maintenance Checks and Services (PMCS)	3-4,T 3-1

R

RadioTestSetAN/PRM-34.	F 1-1
Random Length Antenna...	2-7 <u>b</u>
Reassembly (S.N. 1 thru 634)	5-12 <u>e</u>
Reassembly (S.N. 635 and Up)	5-12 <u>f</u>
Receiver Sensitivity Squelch Test	2-3 <u>d</u>
Receiver Tests	1-13 <u>b</u>
Recommendations, Equipment Improvement, Reporting	1-9
Records, Maintenance	1-3
References	Appendix A
Removal of AI Module	5-12 <u>a</u> (6)
Removal of A2 Module	5-12 <u>a</u> (5)
Removal of A3 Module	5-12 <u>a</u> (7)

Subject

Removal of Battery	5-12 <u>a</u> (3)
Removal of Battery Retainer	5-12 <u>a</u> (4)
Removal of Bottom Cover Assembly	5-12 <u>a</u> (2)
Removal of Top Cover Assembly	5-12 <u>a</u> (1)
Removal of Test Set Subassembly	5-12 <u>a</u> (8)
Removing A2 Module	F 5-4
Repair or Replacement	3-8
Repair Parts	3-3,5-5
Replacement, Battery	3-9
Repair	3-8
Reporting Equipment Improvement Recommenda- tions	1-9
Reports, Maintenance	1-3
Reverse Power Alignment Procedure	5-14c
Reverse Power Test	2-3 <u>e</u> ,5-13 <u>c</u>
Reverse Power Test Setup	F5-8
RF Spectrum Alignment Procedure	5-14d
RF Spectrum Test 1	5-13 <u>d</u>
RF Spectrum Test Setup	F 5-9

S

Schematic Diagram, Interconnection	F 5-1
Service Upon Receipt	2-2a
Shipment, Preparation for	1-7
Special Purpose Cable	5-4,F F-1
Special Tools	3-2,5-4
Storage	2-4
Storage, Preparation for	1-7
Subassembly Removal	5-12 <u>a</u> (8)
Support Equipment	3-2,5-4
Symptom Index	5-10
Symptom Index, Troubleshooting	T 5-1

T

Test, Field Strength	2-3 <u>g</u>
Test, Forward and Reverse Power	2-3 <u>e</u>
Test, Frequency	2-3 <u>f</u>
Test, Power, Forward and Reverse	2-3 <u>e</u>
Test, Receiver Sensitivity Squelch	2-3 <u>d</u>
Test Set Alignment Procedures	5-14
Test Set and AN/PRC-68 Field Strength Test Interconnection Diagram	F 2-7

Subject	Paragraph, Figure, Table, Number
Test Set and AN/PRC-68 Interconnection Diagram . . .	F 2-6
Test Set and AN/VRC-12 Interconnection Diagram . . .	F 2-4
Test Set and AN/VRC-77 Interconnection Diagram . . .	F 2-5
Test Set Block Diagram	F 1-3
Test Set, Radio, AN/PRM-34	F 1-1
Test Set Subassembly Removal	5-12a(8)
Test Set TurnOffProcedure	2-3h
Test Set Turn On Procedure	2-3 b
Test, Squelch, Receiver Sensitivity	2-3 d
Tests, Receiver	1- 13b
Tests, Transmitter	1-13 c
TMDE	3-2,5-4
Tools and Equipment	5-3
Tools and Equipment, Common	3-1
Top Cover Assembly Removal	5-12 <u>a</u> (1)
Transmitter Tests	1-13 <u>c</u>
Tree, Logic	5-11
Tree, Logic, Troubleshooting	F 5-2
Troubleshooting, General Support	5-7
Troubleshooting, Logic Tree	F 5-2
Troubleshooting, Organizational Level	3-5
Troubleshooting Procedures	5-8
Troubleshooting Symptom Index	T 5-1
TS-3951/PRM-34, Radio Test Set, Exploded View . . .	F 5-3
Turn Off Procedure, Test Set	2-3h
TurnOnProcedure, Test Set	2-3 b

U

■ Undervoltage Test	5-13 <u>b</u>
Undervoltage Test Setup	F 5-15
Unpacking	2-2 <u>a</u> (1)
Unpacking AN/PRM-34	F 2-2
Unusual Weather, Operation in	2-8

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN JOT DOWN THE DOPE ABOUT IT ON THIS FORM CAREFULLY TEAR IT OUT FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)
 Commander
 Stateside Army Depot
 ATTN: AMSTA-US
 Stateside, N.J. 07703

DATE SENT
 10 July 1975

PUBLICATION NUMBER
 TM 11-5840-340-12

PUBLICATION DATE
 23 Jan 74

PUBLICATION TITLE
 Radar Set AN/PRC-76

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO
2-25	2-28		
3-10	3-3		3-1
5-6	5-8		

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

Recommend that the installation antenna alignment procedure be changed throughout to specify a 2° IFF antenna lag rather than 1°.

REASON: Experience has shown that with only a 1° lag, the antenna servo system is too sensitive to wind gusting in excess of 25 knots, and has a tendency to rapidly accelerate and decelerate as it hunts, causing strain to the drive train. Hunting is minimized by adjusting the lag to 2° without degradation of operation.

Item 5, Function column. Change "2 db" to "3db."

REASON: The adjustment procedure the the TRANS POWER FAULT indicator calls for a 3 db (500 watts) adjustment to light the TRANS POWER FAULT indicator.

Add new step f.1 to read, "Replace cover plate removed in step e.1, above."

REASON: To replace the cover plate.

Zone C 3. On J1-2, change "+24 VDC to "+5 VDC."

REASON: This is the output line of the 5 VDC power supply. +24 VDC is the input voltage.

TEAR ALONG PERFORATED LINE

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER
 SSG I. M. DeSpirito 999-1776

SIGN HERE

DA FORM 2028-2
 1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

PS--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

FILL IN YOUR
UNIT'S ADDRESS

FOLO BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



TEAR ALONG PERFORATED LINE

Commander
US Army Communications-
Electronics Command
ATTN: DRSEL-ME-MP
Fort Monmouth, New Jersey 07703

SAMPLE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 11-6625-3015-14

PUBLICATION DATE

14 Oct 1983

PUBLICATION TITLE

Radio Test Set AN/PRM-34

BE EXACT PIN-POINT WHERE IT IS

PAGE NO.	PARA. GRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

DA FORM 2028-2
1 JUL 75

PREVIOUS EDITIONS ARE OBSOLETE

P.S.-IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander
US Army Communications-
Electronics Command
ATTN: DRSEL-ME-MP
Fort Monmouth, New Jersey 07703

TEAR ALONG PERFORATED LINE

By Order of the Secretary of the Army:

JOHN A. WICKHAM JR.
General, United States Army
Chief of Staff

Official:

ROBERT M. JOYCE
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with special list.

U.S. GOVERNMENT PRINTING OFFICE : 1987 - 177-166

PIN : 054270-001